



Steam ironing station

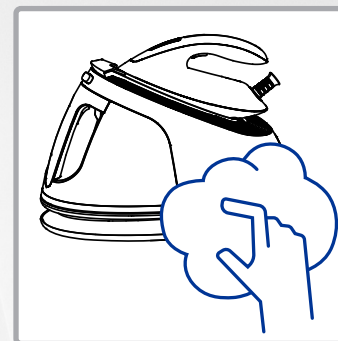

Clean the device regularly
Page: 10

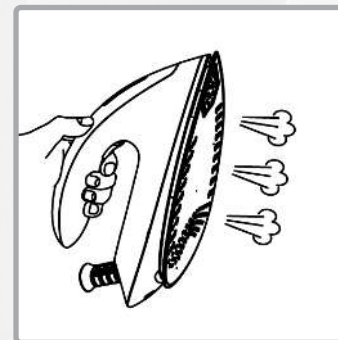

Operate the device correctly
Page: 8



Descale and rinse the
appliance regularly
Page: 10

Welcome

Please read all the information contained in these instructions for use. Keep the instructions for use in a safe place and pass them on to subsequent users. The device may only be used for its intended purpose in accordance with these instructions. Observe the safety instructions. The device is best operated with an RCD circuit breaker (max. 30mA).



Spare parts and accessories shop

<https://www.trisaelectronics.ch/en/zubehoer/>

Table of contents

Safety instructions

4

Technical data

5

Device overview

6

Commissioning

7

Application

8

After use

8

Cleaning | Descaling

10

Problem/Cause

11

Information

12

Safety instructions

- Read all safety instructions, observe the instructions for use, keep them in a safe place and pass them on to subsequent users.
- Children aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, may only use the device if they are supervised by a person responsible for their safety or if they have been shown how to use the device safely and understand the dangers involved. Cleaning and maintenance work must not be carried out by children without supervision.
- The appliance is intended for domestic use, not for commercial use. Do not operate the appliance outdoors.
- Children must not play with the device. Keep the device and power cord away from children under 8 years of age. Never leave the device unattended during operation. Packaging material (e.g. plastic bags) must be kept out of the reach of children.
- Operate the appliance on a dry, level, stable and heat-resistant surface.
- Do not fill the water tank with hot water.
- Allow the appliance to cool down before storing it.
- The ambient temperature must not fall below freezing point.
- Mains connection: The voltage must correspond to the specifications on the device's type plate.
- It is best to operate the device with an RCD (max. 30 mA).
- Do not insert fingers or objects into device openings. Do not cover device openings.
- Beware of moving parts – risk of injury!
- Never carry or pull the device by the power cord. Do not kink, pinch or pull the power cord over sharp edges. Risk of short circuit due to cable breakage!
- Never immerse the device in water or other liquids. No liquid must be allowed to enter the interior of the device (risk of short circuit).
-  Never use near water (baths, sinks, etc.). Do not expose to rain or moisture. Only use the device with dry hands! If the device falls into water, have it checked by a specialist before using it again.
- Avoid operating the device in the vicinity of flammable vapours.
- Never place the device/connection cable on hot surfaces (hotplates) or near open flames. Do not expose the device to intense heat (heating sources, radiators, sunlight). Only extinguish burning devices with a fire blanket.
- Do not operate/connect the appliance to a timer or remote-controlled switch.
- Never pull the plug on the power cord or with wet hands. Unplug the device in the event of malfunctions during use, before refilling, before cleaning, before moving or after use. The plug must remain accessible at all times.
- Switch off unused/unattended devices and pull out the mains plug. Do not wrap the mains cable around the device.
- Check the device, power cord and extension cord for damage before each use. Never use damaged devices (including power cords) – have them repaired or replaced by the manufacturer, its service centre or qualified specialists. Never open the device yourself – risk of injury!
- If the device is misused, operated incorrectly or repaired improperly, no liability can be accepted for any damage that occurs. In this case, the warranty claim is void.
- For safety reasons, do not use accessories that are not recommended/sold by the manufacturer.
- Not for household waste. The device must be disposed of in accordance with local regulations.



CAUTION – Hot surface

Technical specifications

Item no.: 7965.1145

220-240 V AC 50-60 Hz	Input voltage	1.5 L	Water tank	1.8 m	Cable length
60±20 g/min	Steam level 1	80±20 g/min	Steam level 2	120±20 g/min	Steam level 3
490 g/min	Max. steam volume	145±20 °C(Ø)	Steam temperature Steam level 1&2	160±20 °C(Ø)	Steam temperature Steam level 3


Power consumption

2000-2400 W	When on	0.5 W	When off	-/10 min	OFF/standby mode active after...
--------------------	---------	--------------	----------	-----------------	-------------------------------------

Changed data for item no.: 7965.1112

70±20 g/min	Steam level 1	100±20 g/min	Steam level 2	 Power consumption	
160±20 g/min	Steam level 3	700 g/min	Max. steam volume		
				2520-3000 W	When on

Device overview

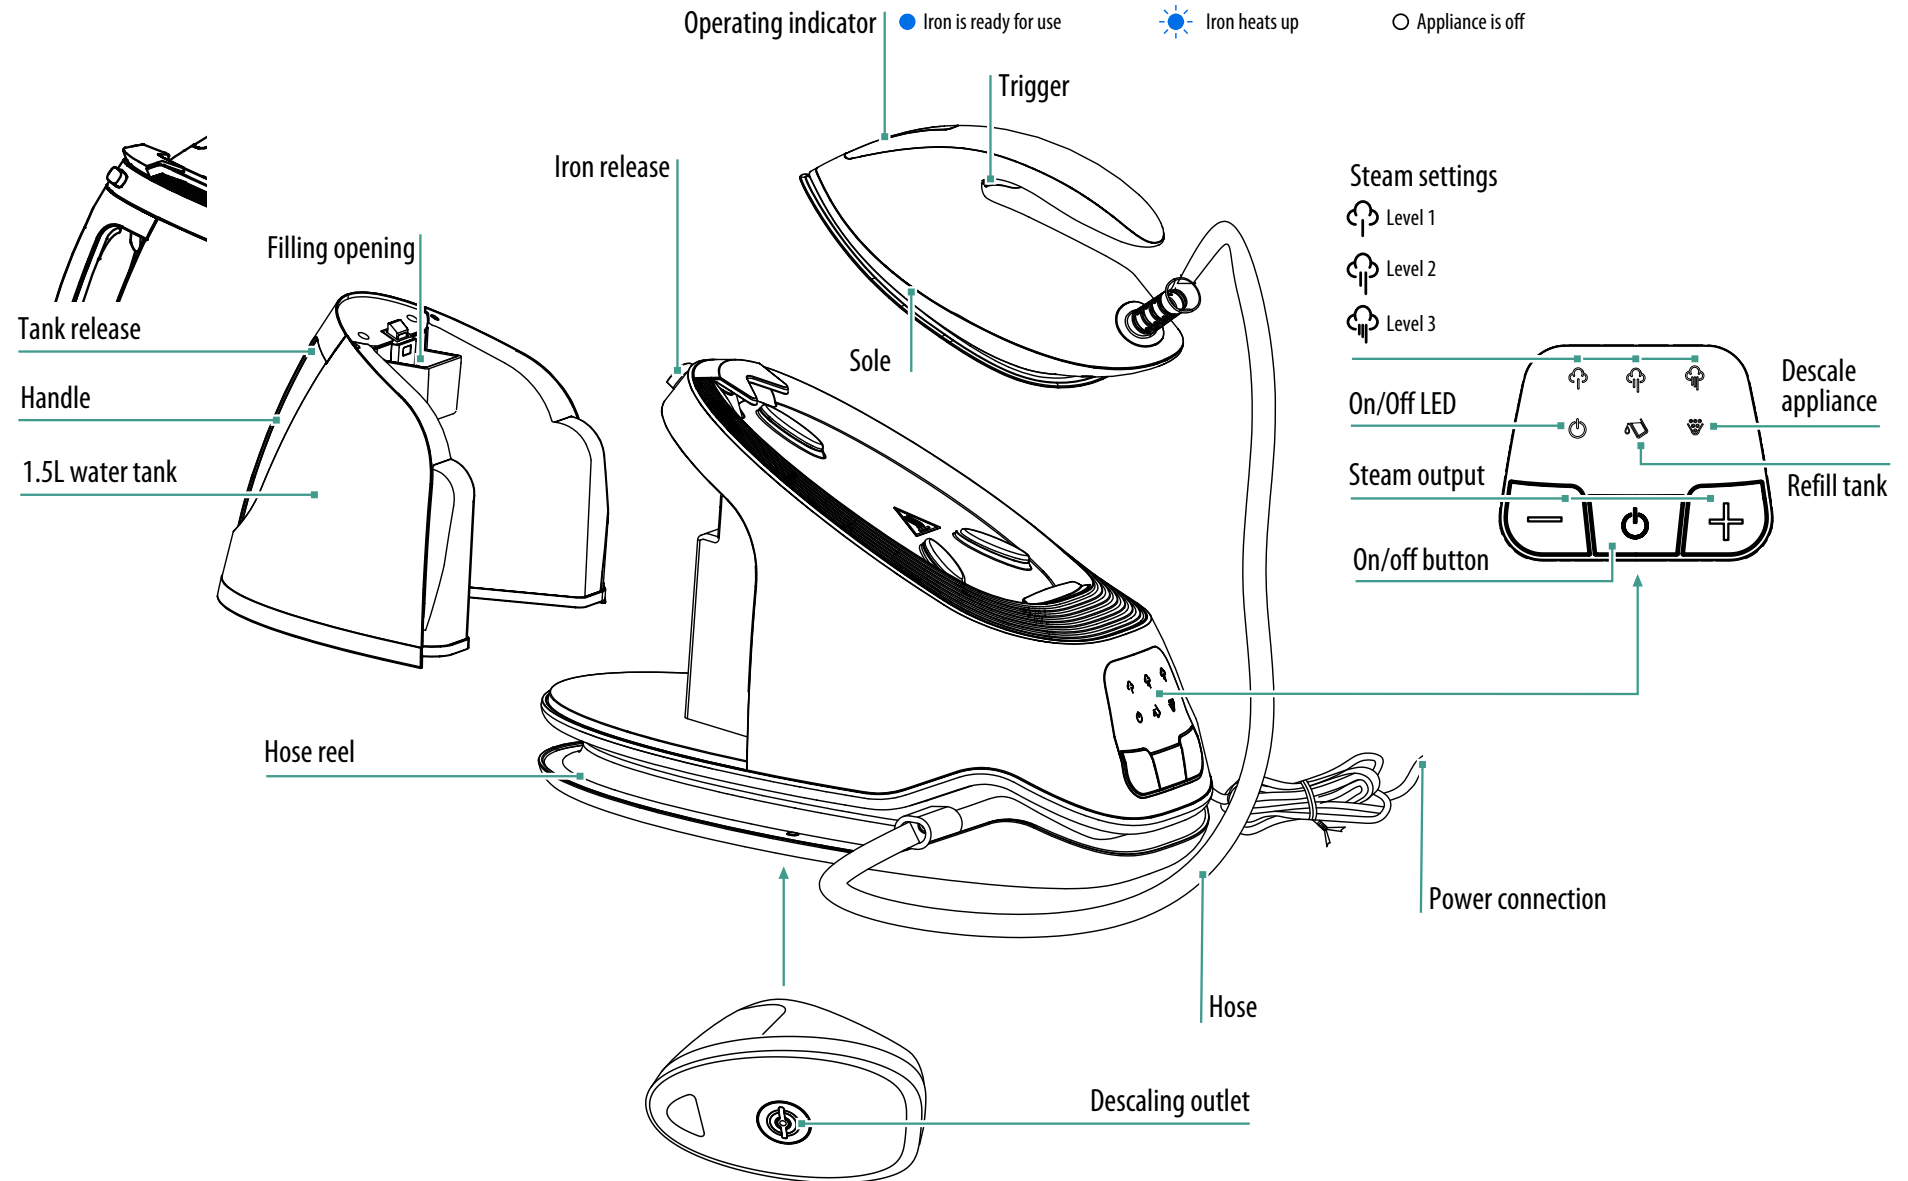


Spare parts and accessories shop
<https://www.trisaelectronics.ch/en/zubehoer/>

Commissioning



Read the safety instructions first!


1. For first-time use

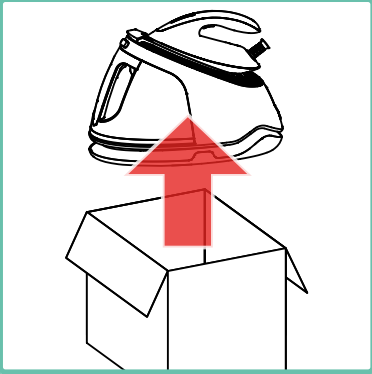

Unpack the device completely and remove the protective film.

- ! Packaging material (e.g. plastic bags) should be kept out of the reach of children.



2. Setting up

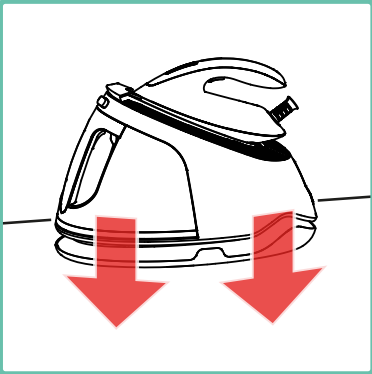

Set up the device in a stable and secure manner.

- ! Always place the steam station on a flat, stable and heat-resistant surface.

3. Removing the tank

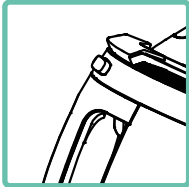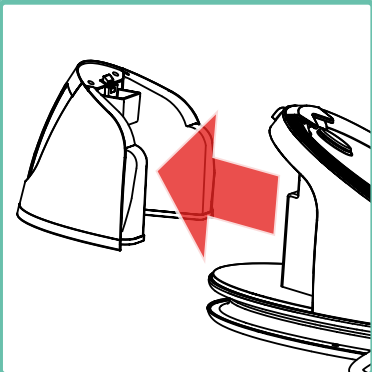

Unlock and remove the tank.

- i Unlock the tank handle.


4. Fill the tank



Fill the tank with water up to the mark.

- ! Maximum capacity 1.5 litres.
- Do not add chemicals, perfume, vinegar or descaling agents to the water tank.
- ! If possible, use distilled or demineralised water.


5. Insert the tank

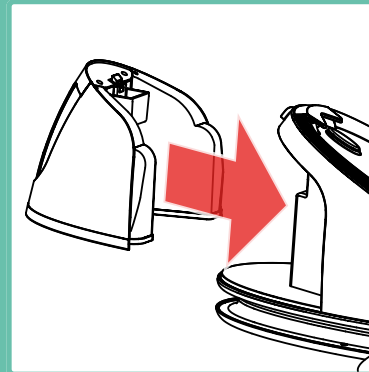

Insert the tank into the station so that it fits snugly.

Application


1. Plug in

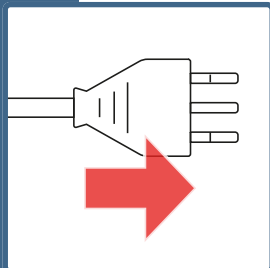

Plug in the mains plug.

! The mains voltage must correspond to the specifications on the type plate.

2. Switch on the device

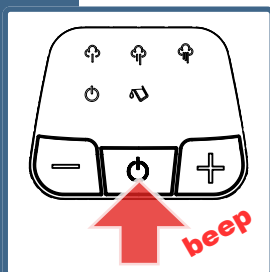


Press the on button briefly.

! **RISK OF BURNS**

The soleplate of the iron becomes very hot. Never touch it!

3. Select steam setting

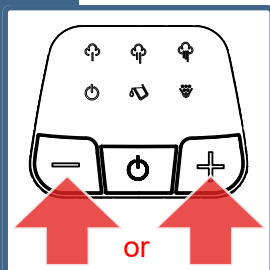


Use the plus button to increase the steam setting and the minus button to decrease it.



Water may drip from the soleplate during the warm-up phase.

The steam station is ready for ironing as soon as the steam level symbol stops flashing.

4. Ironing

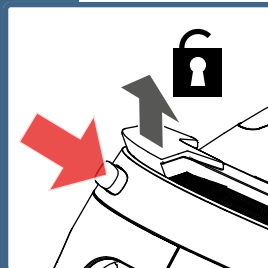

Press the release button and remove the iron from the station by its handle.




RISK OF BURNS on the soleplate. Only hold the appliance by the handle! NEVER touch the station's storage surface.



When using for the first time, iron the steam station over a piece of fabric for several minutes at the highest steam setting to clean the inside of the appliance of any manufacturing residues.

Tips for use

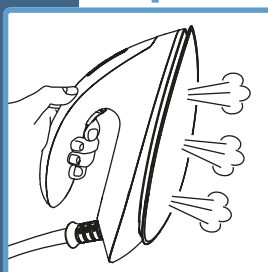

Double-click the trigger for maximum steam boost.

Hold down the trigger for a longer burst of steam.



RISK OF BURNS

Water or particles may spray out of the soleplate when the button is first pressed. Never direct steam towards your body or other people.



Always follow the care labels on the garment!



During operation, the steam pump is audible as a slight humming noise.



Wool and delicate fabrics (e.g. jumpers, suits, silk): Set to max. steam level. Treat clothing with steam only from a slight distance (do not touch directly).



Velvet, corduroy, silk, dark fabrics, synthetic fabrics, embroidery: Iron from the left side. If necessary, place a thin cloth between the iron and the fabric.





Zips: Close them first and do not iron over them.



Dry ironing: Without pressing the trigger.

Pause application

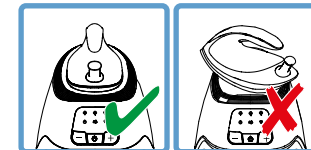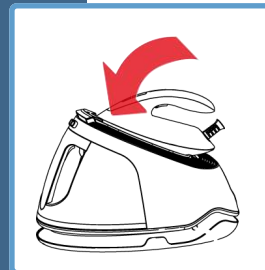

Hook the iron onto the station so that it fits securely.





If necessary, the tank can also be removed and refilled during ironing.



The appliance switches off automatically after 10 minutes of non-use. Press the On button to switch the appliance back on.


After use

1. Park the iron

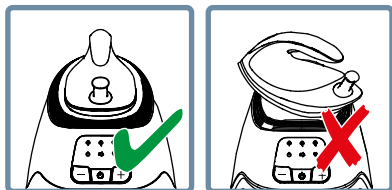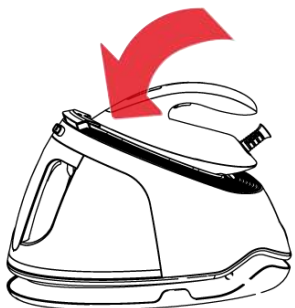


Place the iron on the station. The soleplate of the iron must be hooked in and fit snugly with the station.

2. Lock the iron

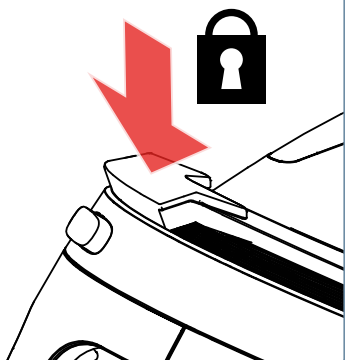


To lock the iron, press down on the locking mechanism.

3. Switch off

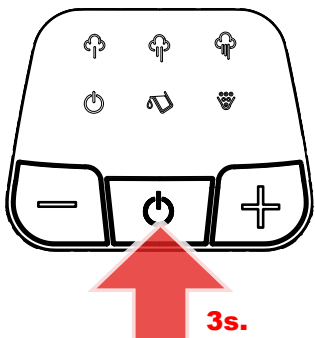

Switch off the appliance by pressing and holding the on/off button.

4. Unplug

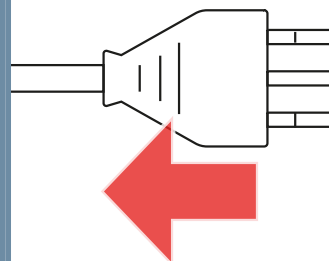

Unplug the power cord.

! Allow the appliance to cool down completely.

5. Empty residual water




Remove the tank and empty any remaining water.

Cleaning



First unplug the appliance and allow it to cool down.

1. Wipe

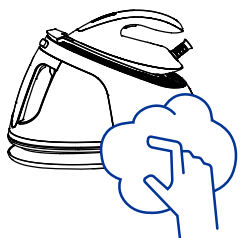

Wipe the housing with a soft, damp cloth.

! Do not use abrasive cleaning agents or sponges.

2. Remove residue



Wipe off any traces of starch/deposits on the soleplate with a soft, damp cloth in a longitudinal direction.

3. Rinse the tank



Fill the tank with a little water, then shake vigorously. Empty the tank again.

! Cover the tank opening with one hand to prevent splashing.

Descaling

1. Dissolve the descaler


⌚ 10 min.



Dissolve the descaling tablet in approx. 0.9 litres of water to form a descaling solution.

i Order descaling tablets online:
Item no.: 6212.9800

2. Open the boiler

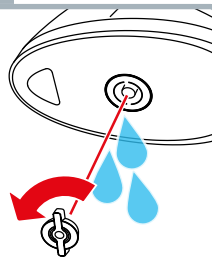

Open the water drain by unscrewing the cap and empty the boiler.

! **Caution!** The appliance may be under pressure. It is essential to allow the appliance to cool down completely first.

3. Pour in the solution




Pour the descaling solution into the boiler using a funnel.

! Screw the cap back on.

4. Leave to take effect


60min

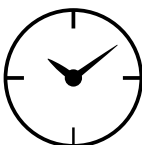

Leave the descaling solution to work for approx. 1 hour.

! Do not leave it to work for longer than necessary, as this will put a lot of strain on the materials in the appliance.


5. Empty the boiler

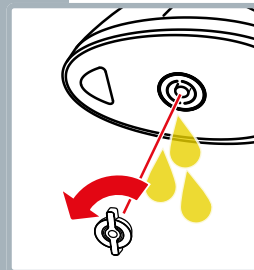

Open the water drain by unscrewing the cap and drain the boiler.

i If the water tank is calcified, collect the descaling liquid from the boiler and pour it into the water tank. Leave to work for approx. 1 hour and then rinse.

6. Rinse the appliance

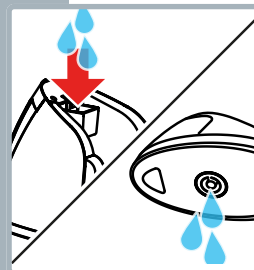

Rinse the tank and boiler with fresh water. Screw the cap back on.

i Swirl the appliance slightly while rinsing.



If necessary: repeat step 6 a few times until the appliance is completely rinsed.

Problems and causes

Problem/Cause	Solution
No steam or steam is unsatisfactory	Is the appliance heated up? Is the steam level LED still flashing? Is there no or only a small amount of water in the tank? Is the steam hose kinked?
Deposits are coming loose from the soleplate	Is the appliance clean and rinsed? See Cleaning?
The fabric is shiny after ironing	Temperature too high? Garment ironed incorrectly? Were the instructions on the care label followed?
Marks are appearing on the fabric	Is the soleplate clean? Are there starch deposits on the soleplate?
Water dripping from the soleplate	This is normal, especially when the ironing station is still warming up.

User information

Warranty

We provide a 5-year warranty for this device from the date of purchase. The warranty covers the replacement or repair of a device with material or manufacturing defects. Replacement with a new device or return with a refund of the purchase price is not possible. The warranty does not cover normal wear and tear, commercial use, changes to the original condition, cleaning work, consequences of improper handling or damage caused by the purchaser or third parties, damage attributable to external circumstances or damage caused by batteries. The warranty requires that the defective device be sent in at the purchaser's expense with the warranty card dated and signed by the point of sale or with the purchase receipt.

Disposal/environmental protection

Never dispose of this device in household waste, but in accordance with local regulations. Only use official collection points in your municipality. If devices are disposed of in an uncontrolled manner, harmful substances can escape and poison the food chain, flora and fauna. Your point of sale is obliged to take back old devices. Immediately render disused devices unusable. Unplug the power plug and cut the power cord.

Distribution

CH Trisa Electronics AG
Kantonsstrasse 121
CH-6234 Triengen
info@trisaelectronics.ch
+41 41 933 00 30

DE Ernst Lorch KG
Bildstockstraße 9
D-72458 Albstadt
HG@lorch-gruppe.com
+49 (7431) 124 200

AT SCD Handels GmbH
Unterhaus 33
A-2851 Krumbach
service@trisaelectronics.at
+43 (2647) 4304070

BG Trisa GmbH
43A, Gorski Patnik Strasse
BG- 1421 Sofia

