 


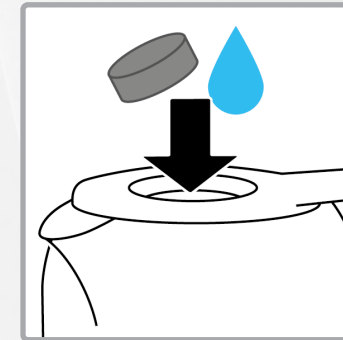

Limescale build-up affects taste and heating performance. Descale regularly to ensure appliance continues to perform well.
Descaling: Page: 9



Fill to between Min and Max markings. This ensures that the water boils safely.
Page 8

Art. 6470.3812

Art. 6470.1145

Art. 6470.2612

Welcome



Please read all the information contained in these instructions for use. Keep the instructions for use in a safe place and pass them on to subsequent users. The device may only be used for its intended purpose in accordance with these instructions. Observe the safety instructions. The device is best operated with an RCD circuit breaker (max. 30mA).



Complies with the European directives on safety and EMC.

We reserve the right to make changes to the design, equipment and specifications. Errors and omissions excepted.



Spare parts and accessories shop

<https://www.trisaelectronics.ch/en/zubehoer/>

Table of Contents

Safety instructions	4
---------------------	---

Specifications	5
----------------	---

Appliance overview	6
--------------------	---

Before first use	7
------------------	---

Boil water	8
------------	---

Cleaning	9
----------	---

Descaling	9
-----------	---

Problem and causes	10
--------------------	----

User information	11
------------------	----

Safety instructions

- Read all safety instructions, observe the instructions for use, keep them in a safe place and pass them on to subsequent users.
- Children aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, may only use the device if they are supervised by a person responsible for their safety or if they have been shown how to use the device safely and understand the dangers involved. Cleaning and maintenance work must not be carried out by children without supervision.
- Not for household waste. The device must be disposed of in accordance with local regulations.
- If the device is misused, operated incorrectly or repaired improperly, no liability can be accepted for any damage that occurs. In this case, the warranty claim is void.
- Check the device, power cord and extension cord for damage before each use. Never use damaged devices (including power cords) – have them repaired or replaced by the manufacturer, its service centre or qualified specialists. Never open the device yourself – risk of injury!
- Do not insert fingers or objects into device openings. Do not cover device openings.
- Avoid operating the device in the vicinity of flammable vapours.
- Children must not play with the device. Keep the device and its power cable out of children's reach. Never leave the device unattended whilst it is in use. Packaging materials (e.g. plastic bags) must be kept out of children's reach.
- Mains connection: The voltage must correspond to the specifications on the device's type plate.
- Never carry or pull the device by the power cord. Do not kink, pinch or pull the power cord over sharp edges. Risk of short circuit due to cable breakage!



Never use near water (baths, sinks, etc.). Do not expose to rain or moisture. Only use the device with dry hands! If the device falls into water, have it checked by a specialist before using it again.

- Never place the device/connection cable on hot surfaces (hotplates) or near open flames. Do not expose the device to intense heat (heating sources, radiators, sunlight). Only extinguish burning devices with a fire blanket.



Protection class I — with protective conductor:
This device complies with protection class I. It must be connected to a socket with a protective conductor (earthed socket).

- Never pull the plug on the power cord or with wet hands. Unplug the device in the event of malfunctions during use, before refilling, before cleaning, before moving or after use. The plug must remain accessible at all times.
- Switch off unused/unattended devices and pull out the mains plug. Do not wrap the mains cable around the device.
- Only operate the device on a flat, stable, dry surface. Never attach it to a wall or ceiling.
- The device is intended for domestic use, not for commercial use.
- Do not operate/connect the device to a timer or remote-controlled switch.
- For safety reasons, do not use accessories that are not recommended/sold by the manufacturer.
- WARNING: Do not open the lid while water is boiling.
- CAUTION: Put the lid on so that the steam is directed away from the handle.
- WARNING: The filler opening must not be opened during use.
- CAUTION: Switch off the device before removing it from the stand.

- Only fill up to the maximum fill level. Do not fill up past the marking, otherwise hot water may escape or spray out.
- Surfaces that come into contact with food should be cleaned thoroughly after use in accordance with the cleaning instructions.



CAUTION: Hot surface. After use, the surface or the heating element may still be hot due to residual heat.

Specifications


Art. 6470.3812 | Art. 6470.1145 | προϊόν 6470.2612

1.5 l	Max. capacity	I	Protection class	220–240 V 50–60 Hz	Mains connection
Approx. 70 cm	Cable length	23 x 15 x 24 cm	Dimensions	Approx. 1 kg	Weight

Power consumption

< 1850-2200 W	When ON	< 0.1 W	When OFF	-	OFF/Standby mode active after
---------------	---------	---------	----------	---	-------------------------------

 Appliance overview

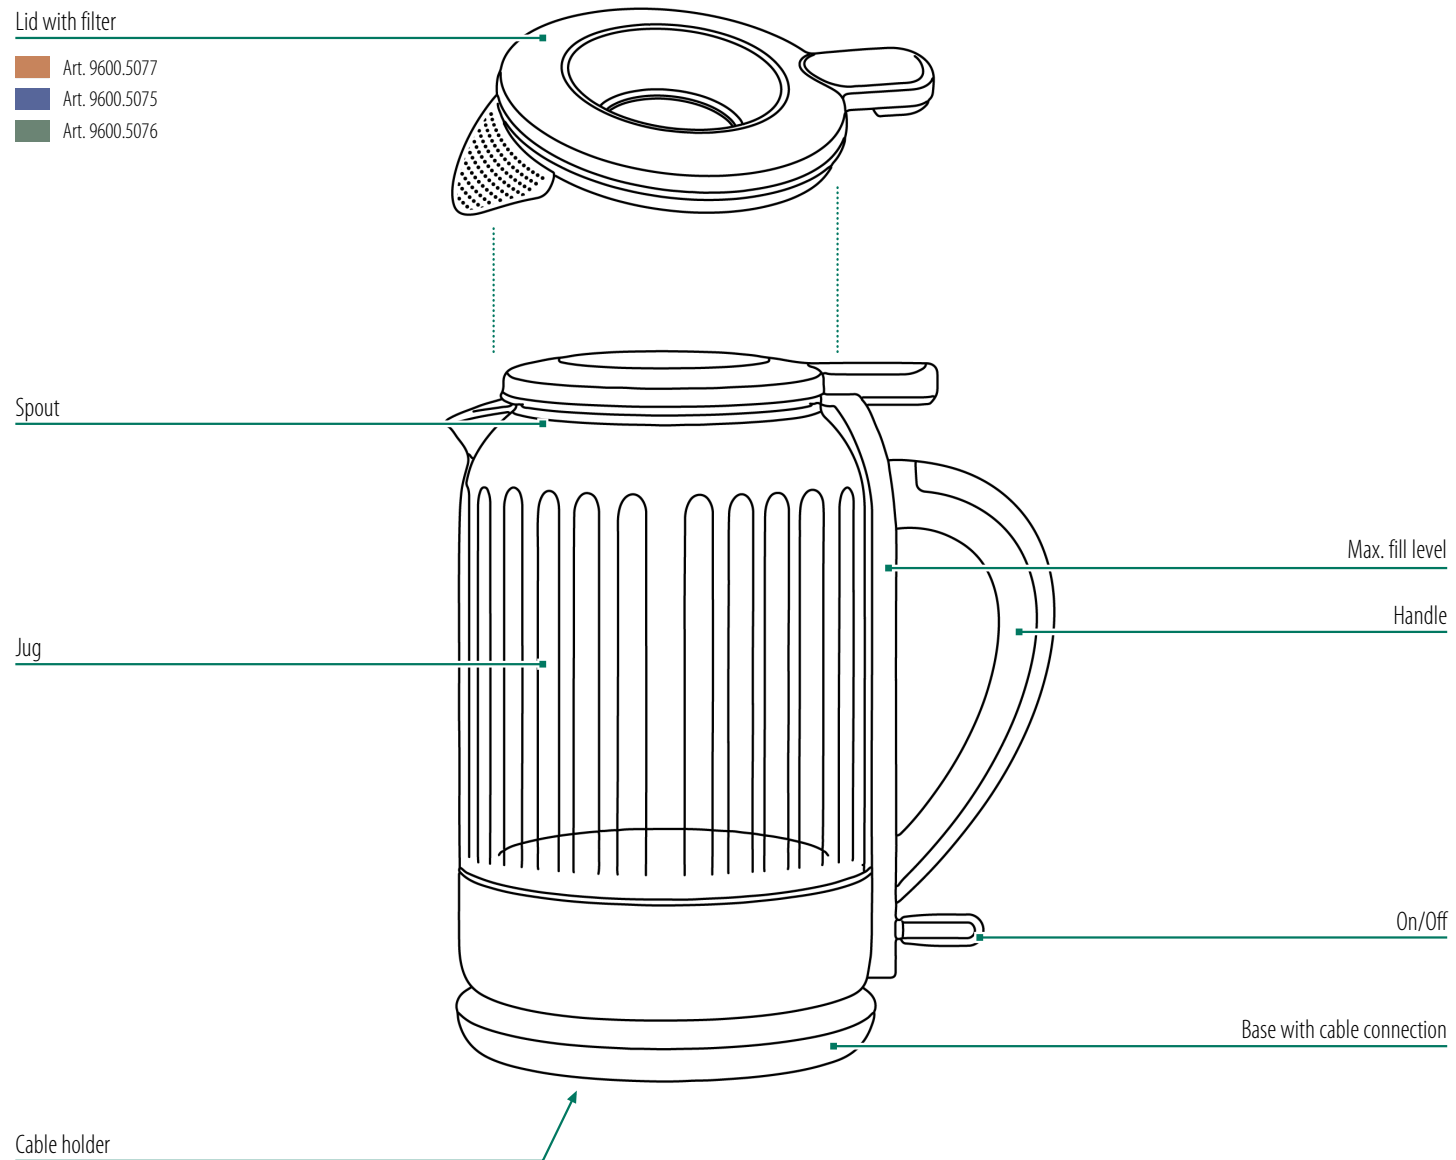

Spare parts and accessories shop
<https://www.trisaelectronics.ch/en/zubehoer/>

Before first use

 
1. Unpack appliance and accessories



Unpack the appliance completely and remove the protective films and bags.


! Keep packaging materials away from children.

2. Clean appliance

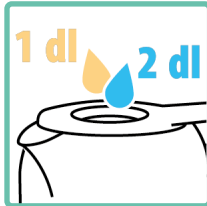

Wipe off the appliance and accessories with a damp cloth.
Pour in water and cleaning vinegar to clean the inside.

 3. Leave water and vinegar solution to work

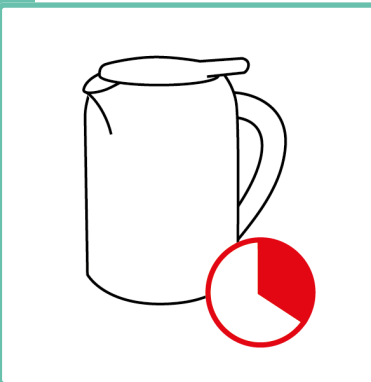

Leave it to work for about 20 minutes, then pour the solution away.


4. Rinse jug



Rinse 2x: Fill with fresh water (up to MAX), boil, empty

Boil water

 1. Place base on stable surface

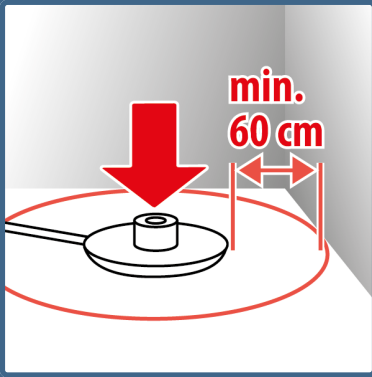

! Do not place the appliance under wall units or extractor hoods. Maintain the minimum clearance from surrounding walls and objects.

 
2. Fill with water



! Do not overfill the appliance – risk of boiling water splashing out! Observe the **MAX** and **MIN** markings on the appliance!


! Only boil water on its own. Do not place tea bags, additives or other liquids in the jug – risk of damage and injury.

3. Place jug on base

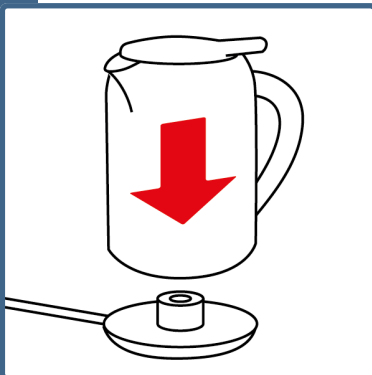

i The jug can be adjusted or rotated on the base as required.

 
4. Plug appliance in

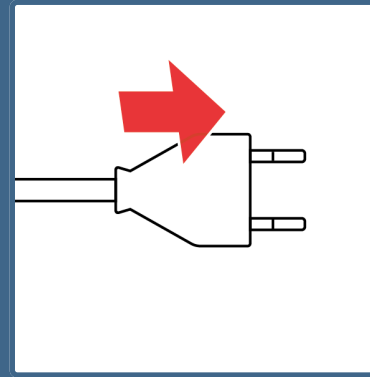

Plug the power plug into a properly installed socket.

! The socket must be rated at 220–240 V~, 50–60 Hz.

 5. Switch on, boil water

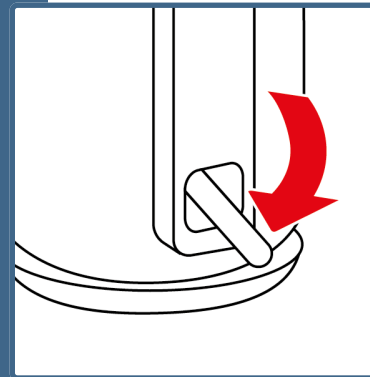

! Risk of burns: The appliance gets hot and hot steam is released during boiling. Keep away from parts of the body, furniture, etc.

! Do not open the lid during boiling or pouring – risk of scalding!

i The appliance switches off as soon as the water boils. To stop the process manually, toggle the on/off switch.

6. Pick up jug, pour water

 


Pick up the jug of boiling water and pour out as required.

! Only hold the appliance by the handle – risk of burns!


Cleaning

1. Unplug power plug

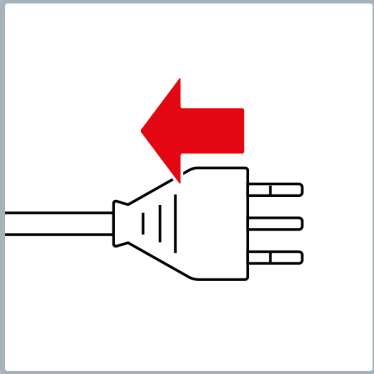


! Never unplug by pulling the power cable or with wet hands.

 2. Wipe off filter

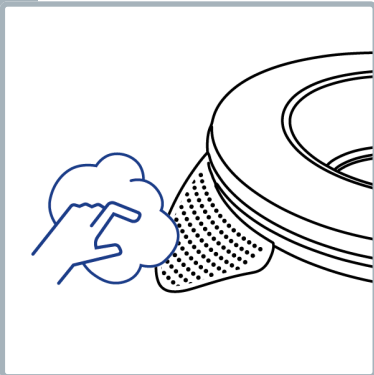

Remove the lid from the jug, clean the filter with a soft, damp cloth, and then replace the lid.

 
3. Store appliance

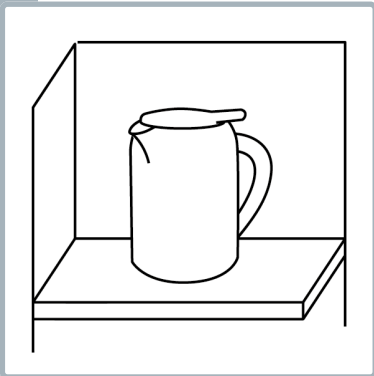

Store the appliance in a cool, dry place, out of reach of children.

Descaling

 1. Put descaler into jug

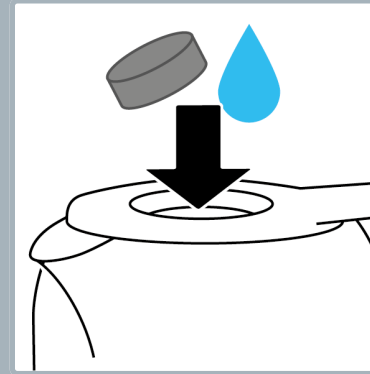


Add the descaler to the jug in accordance with the manufacturer's instructions.

! Use a commercially available descaler. Follow the instructions provided by the descaler manufacturer. Depending on the product, the descaler may need to be diluted and/or dissolved before use.

i Recommended TRISA descaling tablets:
Art. no.: 6212.9800

 2. Leave descaler to work

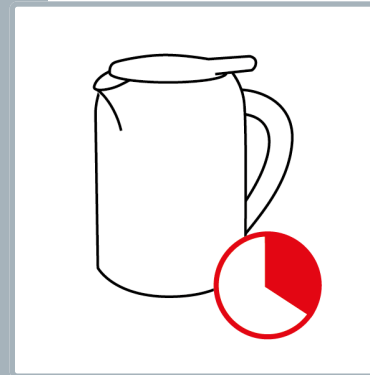

Leave the liquid to work until the limescale has completely dissolved. Then empty the jug.

3. Rinse jug



Rinse several times: Fill with fresh water, boil, empty

Problem and causes

Problem/cause	Solution
Appliance does not work	Is the mains plug properly plugged into the socket? Is the jug positioned correctly on the base? Is the socket and/or fuse working properly?
Appliance switches off prematurely	Is the jug underfilled or overfilled? Has the appliance cooled down and been restarted?
Water does not boil / heating output low	Was the appliance descaled regularly? Is the lid properly in place?
The water tastes/smells unusual	Was the appliance descaled regularly? Have you boiled clean water in the appliance twice before first use?
The kettle is dripping / leaking	Is the jug overfilled? Observe the MAX marking! Is the filter/spout descaled and undamaged?
LED, automatic switch-off not working or appliance smells of smoke	Unplug the appliance immediately and stop using it! Contact customer service.

User information



We provide a 5-year warranty for this device from the date of purchase. The warranty covers the replacement or repair of a device with material or manufacturing defects. Replacement with a new device or return with a refund of the purchase price is not possible. The warranty does not cover normal wear and tear, commercial use, changes to the original condition, cleaning work, consequences of improper handling or damage caused by the purchaser or third parties, damage attributable to external circumstances or damage caused by batteries. The warranty requires that the defective device be sent in at the purchaser's expense with the warranty card dated and signed by the point of sale or with the purchase receipt.



Disposal/environmental protection

Never dispose of this device in household waste, but in accordance with local regulations. Only use official collection points in your municipality. If devices are disposed of in an uncontrolled manner, harmful substances can escape and poison the food chain, flora and fauna. Your point of sale is obliged to take back old devices. Immediately render disused devices unusable. Unplug the power plug and cut the power cord.

Distribution

CH Trisa Electronics AG
Kantonsstrasse 121
CH-6234 Triengen
info@trisaelectronics.ch
+41 41 933 00 30

DE Ernst Lorch KG
Bildstockstraße 9
D-72458 Albstadt
HG@lorch-gruppe.com
+49 (7431) 124 200

AT SCD Handels GmbH
Unterhaus 33
A-2851 Krumbach
service@trisaelectronics.at
+43 (2647) 4304070

BG Trisa Ltd.
43A, Gorski Patnik Street
BG- 1421 Sofia

