 
 


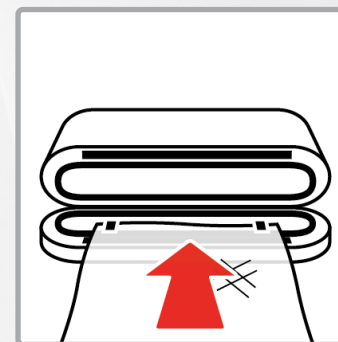

Vacuum, seal, or inflate with just one device and various attachments.

Application: From page 7 onward

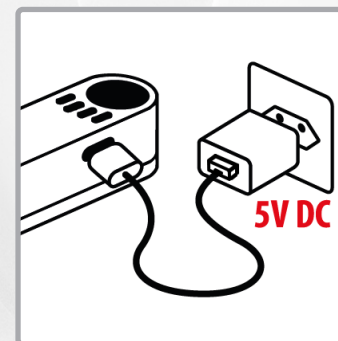

Battery-powered: Charge the device before use

Welcome



Please read all the information contained in these instructions for use. Keep the instructions for use in a safe place and pass them on to subsequent users. The device may only be used for its intended purpose in accordance with these instructions. Observe the safety instructions. The device is best operated with an RCD circuit breaker (max. 30mA).



Complies with the European directives on safety and EMC.

We reserve the right to make changes to the design, equipment and specifications. Errors and omissions excepted.



Spare parts and accessories shop

<https://www.trisaelectronics.ch/en/zubehoer/>

Table of Contents

Safety instructions	4
---------------------	---

Specifications	5
----------------	---

Overview of devices	6
---------------------	---

Vacuum and seal	7
-----------------	---

Seal (without vacuuming)	8
--------------------------	---

Vacuum the bag/box with valve	9
-------------------------------	---

Inflate	10
---------	----

Cleaning	11
----------	----

Problems and causes	12
---------------------	----

User information	13
------------------	----

Safety instructions

- Read all safety instructions, observe the instructions for use, keep them in a safe place and pass them on to subsequent users.
- Children aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, may only use the device if they are supervised by a person responsible for their safety or if they have been shown how to use the device safely and understand the dangers involved. Cleaning and maintenance work must not be carried out by children without supervision.
- Not for household waste. The device must be disposed of in accordance with local regulations.
- If the device is misused, operated incorrectly or repaired improperly, no liability can be accepted for any damage that occurs. In this case, the warranty claim is void.
- Never immerse the device in water or other liquids. No liquid must be allowed to enter the interior of the device (risk of short circuit).
- Do not insert fingers or objects into device openings. Do not cover device openings.
- Avoid operating the device in the vicinity of flammable vapours.
- Children must not play with the device. Keep the device and its power cable out of children's reach. Never leave the device unattended whilst it is in use. Packaging materials (e.g. plastic bags) must be kept out of children's reach.



Never use near water (baths, sinks, etc.). Do not expose to rain or moisture. Only use the device with dry hands! If the device falls into water, have it checked by a specialist before using it again.

- Never place the device/connection cable on hot surfaces (hotplates) or near open flames. Do not expose the device to intense heat (heating sources, radiators, sunlight). Only extinguish burning devices with a fire blanket.



Protection class III — Safety extra-low voltage (SELV): This device operates with an extra-safe low-voltage source. Only use the power supply unit/accessories approved by the manufacturer. Connection to the mains voltage without the specified SELV supply system is not permitted and is dangerous.

- Only operate the device on a flat, stable, dry surface. Never attach it to a wall or ceiling.
- The device is intended for domestic use, not for commercial use.
- Do not operate/connect the device to a timer or remote-controlled switch.
- For safety reasons, do not use accessories that are not recommended/sold by the manufacturer.
- Surfaces that come into contact with food should be cleaned thoroughly after use in accordance with the cleaning instructions.



CAUTION: Hot surface. After use, the surface or the heating element may still be hot due to residual heat.

- Check the device, charging cable and extension cord for damage before each use. Never use damaged devices (including charging cable) – have them repaired or replaced by the manufacturer, its service centre or qualified specialists. Never open the device yourself – risk of injury!
- Charging port: The voltage must match the rating plate.
- Never carry/pull the device by the charging cable. Do not kink, pinch or pull the cable over sharp edges. Risk of short circuit if the cable breaks!
- Never unplug by pulling the charging cable or with wet hands. Unplug in case of faults, before refilling, cleaning, moving or after use. The plug must remain accessible at all times.

- Switch off unused/unattended devices and unplug the charging cable. Do not wrap the cable around the device.

Specifications


Art. 7100.31

5 V DC USB	Connection	III	Protection class	0.34 kg	Weight
15 × 5 × 6 cm	Dimensions	approx. 50 cm	Cable length	0.6 Bar	Vacuum
approx. 30 min	Battery life				

Power consumption

10 W	When ON	< 0.5 W	When OFF	- min	OFF/Standby mode active after
------	---------	---------	----------	-------	-------------------------------

Overview of devices

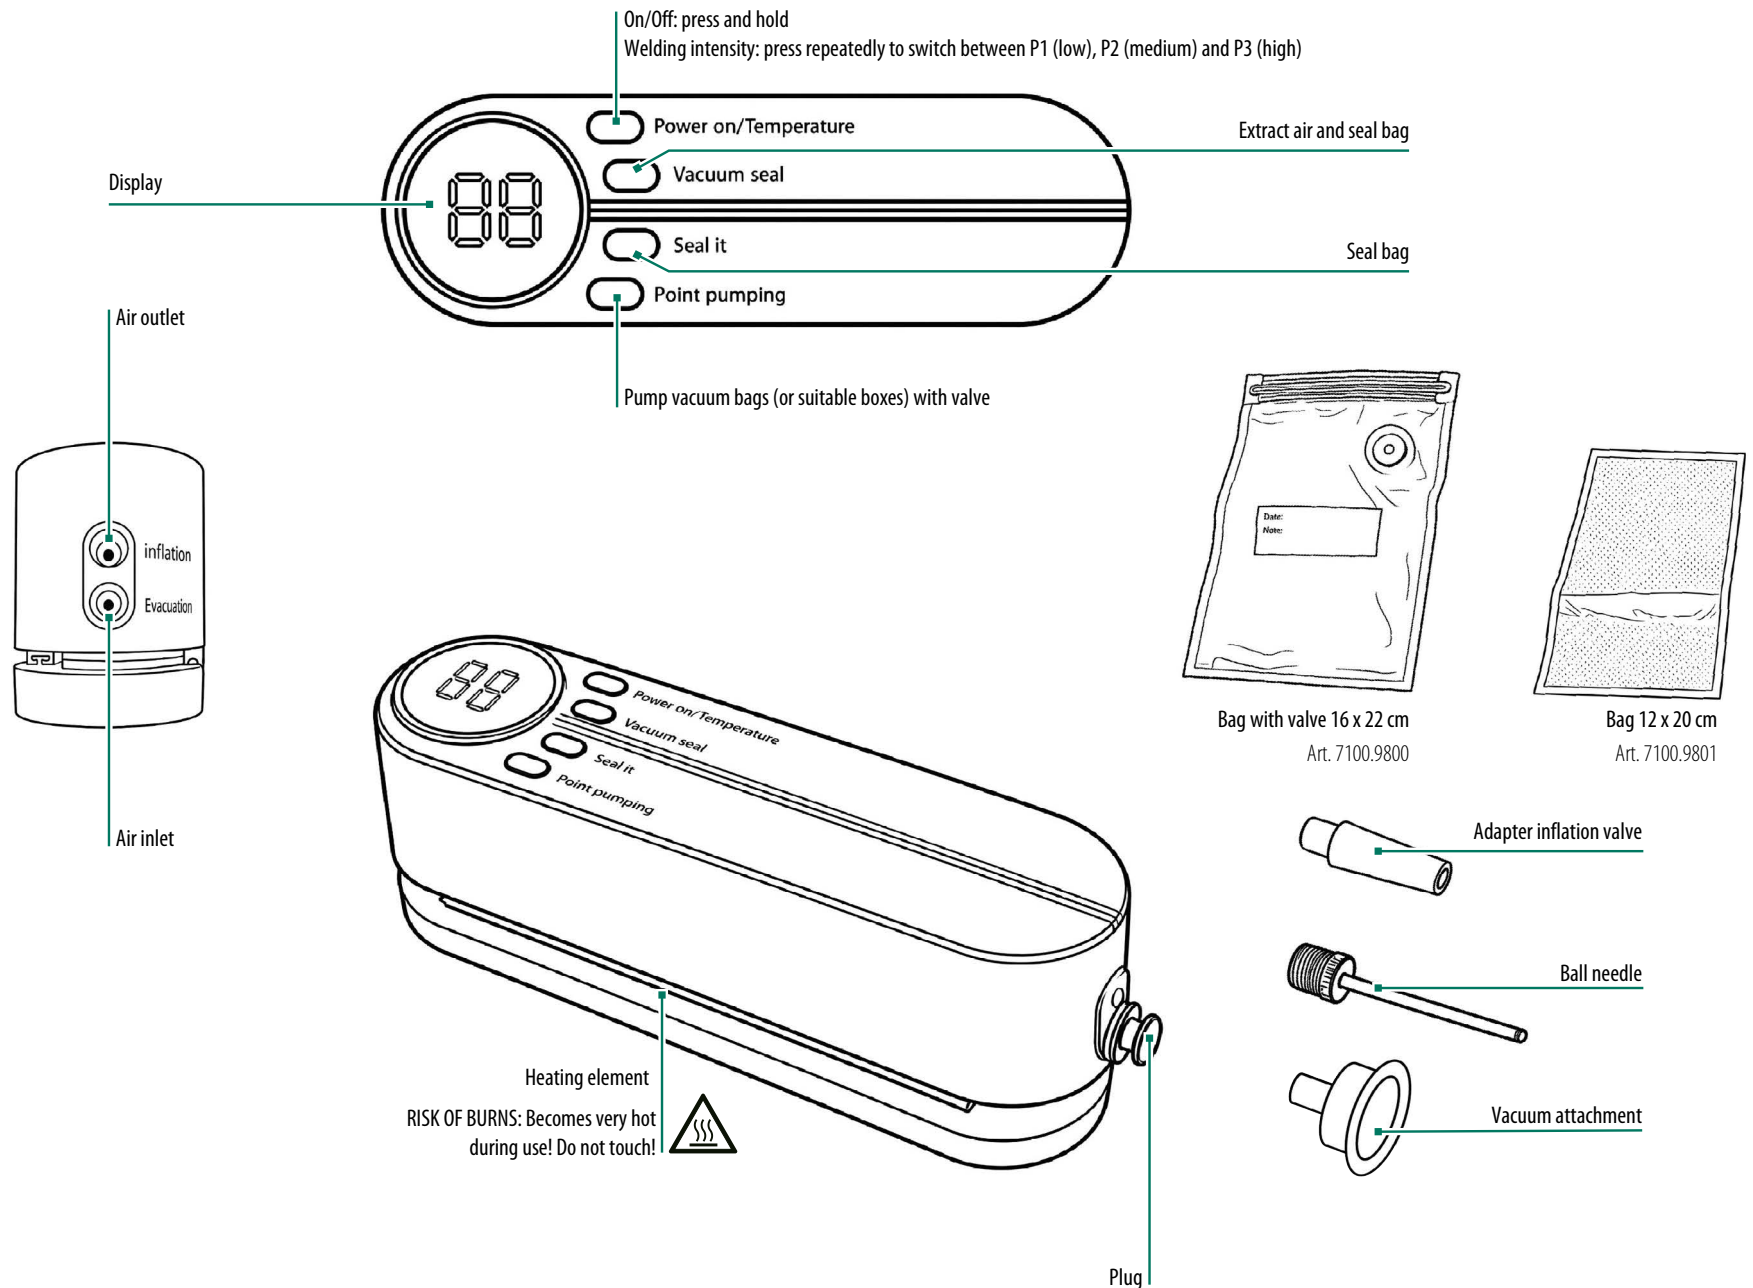


Spare parts and accessories shop

<https://www.trisaelectronics.ch/en/zubehoer/>

Vacuum and seal

1. Charging


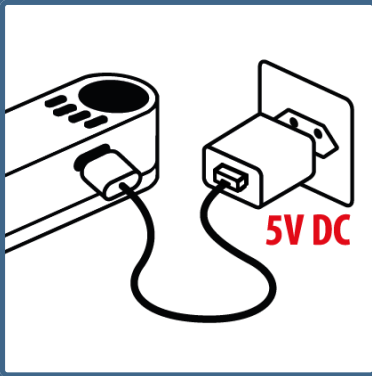


Connect the supplied cable to the device and a USB charger and allow the device to charge.

i USB charger not included.

i When fully charged, the indicator light stays on continuously



2. Insert the bag

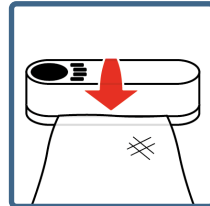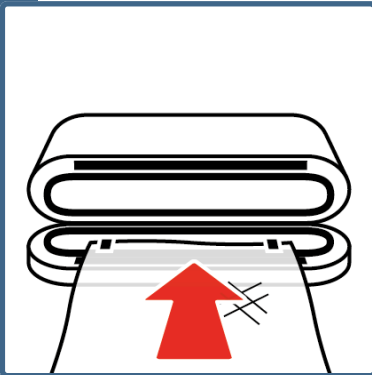

Insert the bag into the device and attach it to the small hook.


i Standard food-safe bags can also be used (max. 12.5 cm wide).

3. Insert the plug

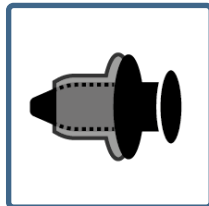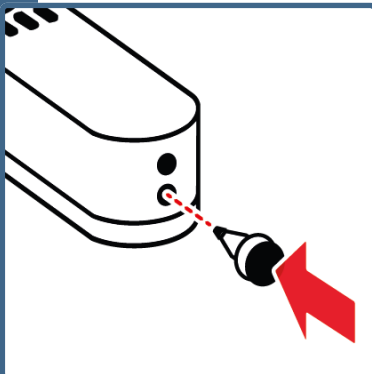


Insert the plug into the air inlet (lower opening).

4. Switch on the device

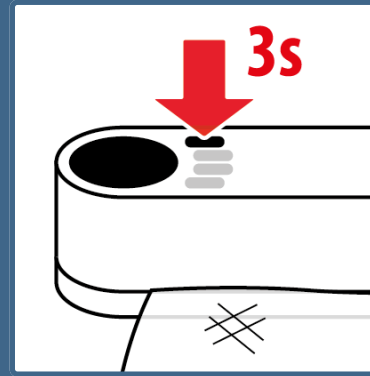

Hold down the button until the appliance switches on.

5. Vacuum and seal

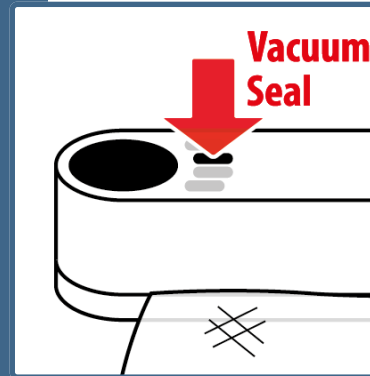


Press the button to vacuum and seal. The device stops when the program is complete.

! Press the device firmly closed, otherwise a vacuum cannot be created.

i Vacuum sealing extends shelf life but does not replace refrigeration.

i Seal not satisfactory? Press the On/Off button repeatedly to switch between sealing strengths P1 (low), P2 (medium), and P3 (high).

6. Remove the bag

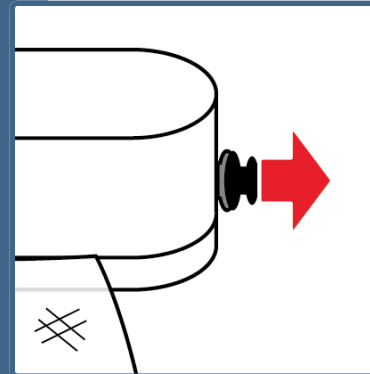


Gently pull the plug to release the vacuum and open the device.

! BURN HAZARD: Do not touch the heating elements when the device is open!

Seal (without vacuuming)

1. Charging


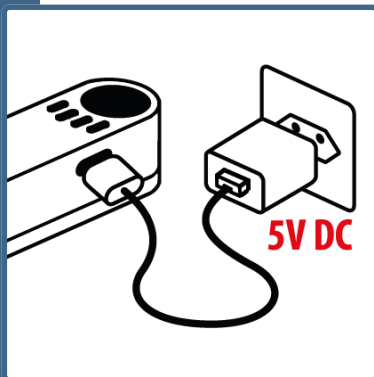


Connect the supplied cable to the device and a USB charger and allow the device to charge.

i USB charger not included.

i When fully charged, the indicator light stays on continuously


2. Insert the bag

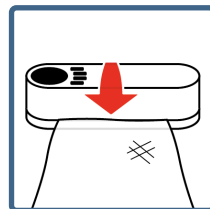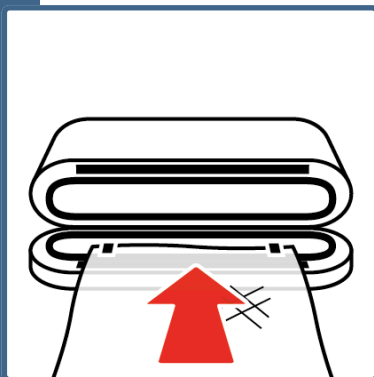

Insert the bag into the device and attach it to the small hook.


i Standard food-safe bags can also be used (max. 12.5 cm wide).

3. Switch on the device

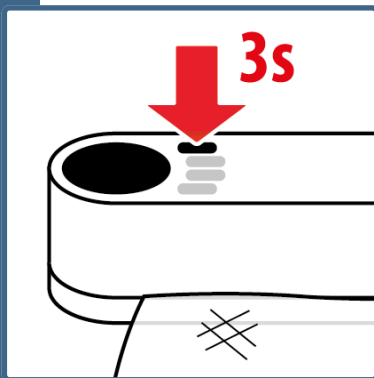

Hold down the button until the appliance switches on.

4. Seal the bag (without vacuuming)

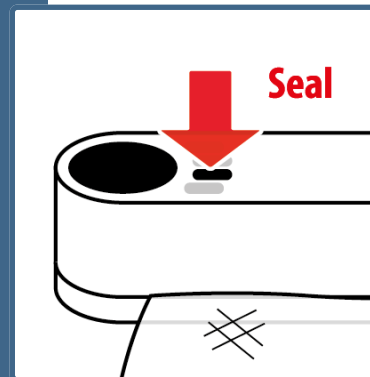


Seal the bag without vacuuming it (ideal for chip bags).

i Seal bags wider than the device's sealing bar in sections. Move the bag a section at a time and seal it again.

i Seal not satisfactory? Press the On/Off button repeatedly to switch between sealing strengths P1 (low), P2 (medium), and P3 (high).

5. Remove the bag

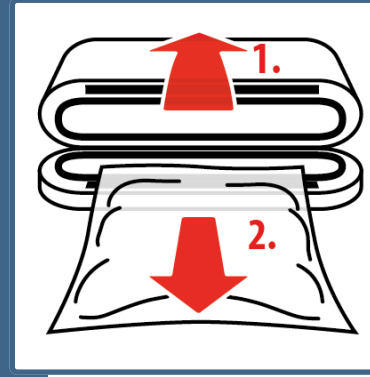


Open the device and remove the sealed bag.

! BURN HAZARD: Do not touch the heating elements when the device is open!

Vacuum the bag/box with valve

1. Charging



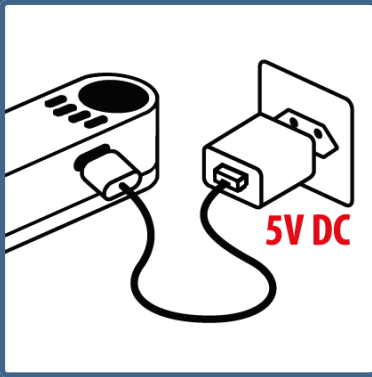


Connect the supplied cable to the device and a USB charger and allow the device to charge.

i USB charger not included.


i When fully charged, the indicator light stays on continuously

2. Attach the valve

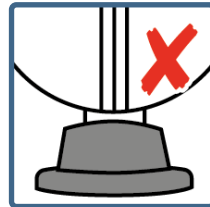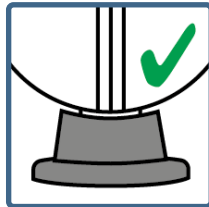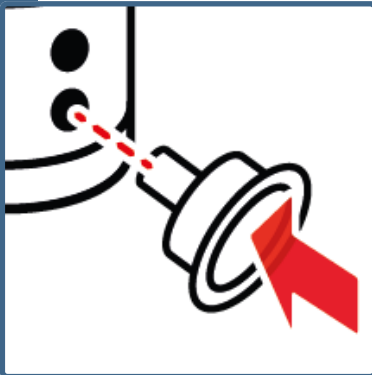


Insert the attachment precisely into the air inlet (lower opening).

3. Switch on the device

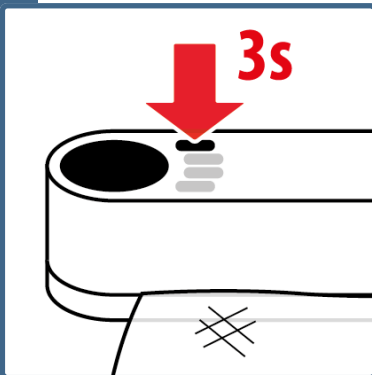

Hold down the button until the appliance switches on.

4. Press the attachment onto the valve

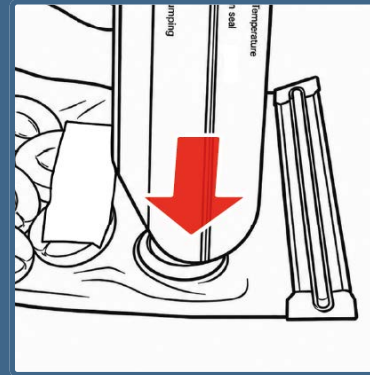


Press the attachment onto the valve of the bag/box.

! The attachment must sit exactly on the valve. If the attachment has shifted, the air cannot be reliably extracted.

! Vacuum liquids, such as soups, only in a container.

5. Vacuum the bag/container

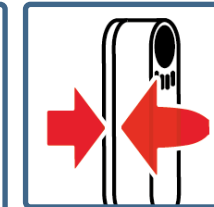


Press and hold the **Pumping button** to vacuum.

! Keep the device closed during this process. When the device is open, the air is not extracted.

i Vacuum sealing extends shelf life but does not replace refrigeration.

Inflate

1. Charging


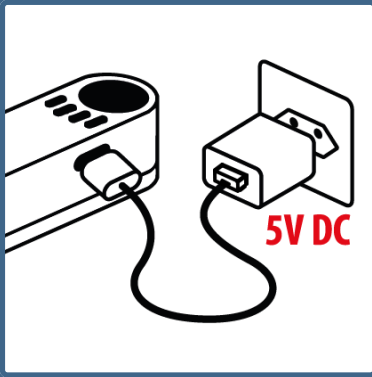


Connect the supplied cable to the device and a USB charger and allow the device to charge.

i USB charger not included.

i When fully charged, the indicator light stays on continuously

2. Attach the pump attachment

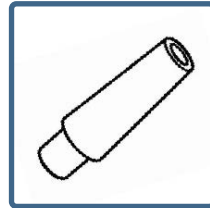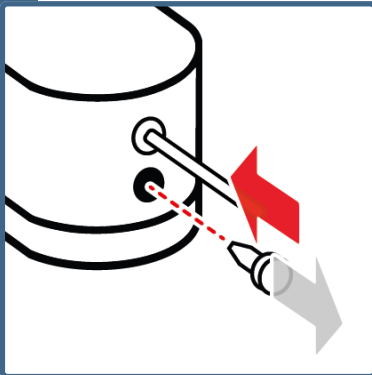

First remove the plug, then insert the needle or inflation valve adapter into the upper opening.

i To inflate pool floats, first connect the inflation valve adapter to the pool float, then to the vacuum sealer.

3. Pump




Press and hold the **Pumping button** to pump.

Cleaning



Switch off the device and allow it to cool down before cleaning. The device must not be connected to the charger and/or charging cable during cleaning.

1. Wipe off housing

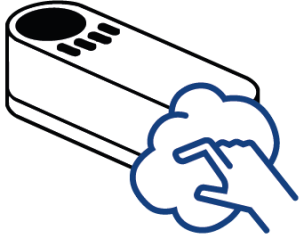

Wipe off the housing with a damp cloth.

- ! Never immerse the appliance in water or hold it under running water. Do not allow any liquid to enter the inside of the device.
- ! Do not use abrasive cleaning agents.

Problems and causes

Problem/cause	Solution
The seal tears open or is not completely sealed	Was the device pressed firmly enough when sealing? Sealing performance insufficient? > Briefly press the On/Off button to adjust the power.
The device does not vacuum	Was the correct button pressed? Was the plug inserted? Was the device pressed firmly enough when sealing?
The bag/container with valve is not vacuumed	Is the attachment positioned airtight on the valve? Was the device pressed firmly enough when vacuuming?
The device does not pump	The plug must be removed from the air inlet (lower opening), and the device must be slightly open.

User information



We provide a 5-year warranty for this device from the date of purchase. The warranty covers the replacement or repair of a device with material or manufacturing defects. Replacement with a new device or return with a refund of the purchase price is not possible. The warranty does not cover normal wear and tear, commercial use, changes to the original condition, cleaning work, consequences of improper handling or damage caused by the purchaser or third parties, damage attributable to external circumstances or damage caused by batteries. The warranty requires that the defective device be sent in at the purchaser's expense with the warranty card dated and signed by the point of sale or with the purchase receipt.



Disposal/environmental protection

Never dispose of this device in household waste, but in accordance with local regulations. Only use official collection points in your municipality. If devices are disposed of in an uncontrolled manner, harmful substances can escape and poison the food chain, flora and fauna. Your point of sale is obliged to take back old devices. Do not continue using discarded devices. Switch off the device and, if possible, remove the battery.

Distribution

CH Trisa Electronics AG
Kantonsstrasse 121
CH-6234 Triengen
info@trisaelectronics.ch
+41 41 933 00 30

DE Ernst Lorch KG
Bildstockstraße 9
D-72458 Albstadt
HG@lorch-gruppe.com
+49 (7431) 124 200

AT SCD Handels GmbH
Unterhaus 33
A-2851 Krumbach
service@trisaelectronics.at
+43 (2647) 4304070

BG Trisa Ltd.
43A, Gorski Patnik Street
BG- 1421 Sofia

