 
 


**5** YEARS  
GUARANTEE

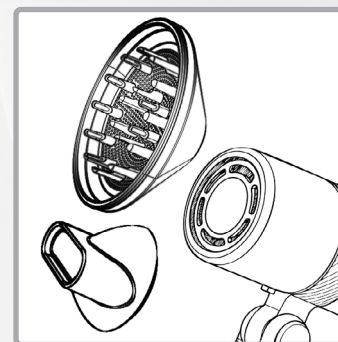

Attach nozzle and select  
temperature:  
Page 7

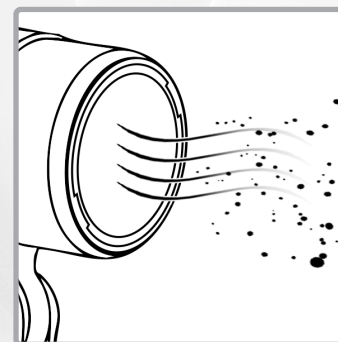

Clean the appliance, blow dust  
out:  
Page 8

# Welcome



**Please read all the information contained in these instructions for use. Keep the instructions for use in a safe place and pass them on to subsequent users. The device may only be used for its intended purpose in accordance with these instructions. Observe the safety instructions. The device is best operated with an RCD circuit breaker (max. 30mA).**



Complies with the European directives on safety and EMC.

We reserve the right to make changes to the design, equipment and specifications. Errors and omissions excepted.



**Spare parts and accessories shop**

<https://www.trisaelectronics.ch/en/zubehoer/>

# Table of Contents

<b>Safety instructions</b>	<b>4</b>	<b>Cleaning</b>	<b>8</b>
<b>Technical data</b>	<b>5</b>	<b>Problems and causes</b>	<b>9</b>
<b>Appliance overview</b>	<b>6</b>	<b>User information</b>	<b>10</b>
<b>Use</b>	<b>7</b>		

# Safety instructions

- Read all safety instructions, observe the instructions for use, keep them in a safe place and pass them on to subsequent users.
- Children aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, may only use the device if they are supervised by a person responsible for their safety or if they have been shown how to use the device safely and understand the dangers involved. Cleaning and maintenance work must not be carried out by children without supervision.
- Not for household waste. The device must be disposed of in accordance with local regulations.
- If the device is misused, operated incorrectly or repaired improperly, no liability can be accepted for any damage that occurs. In this case, the warranty claim is void.
- Check the device, power cord and extension cord for damage before each use. Never use damaged devices (including power cords) – have them repaired or replaced by the manufacturer, its service centre or qualified specialists. Never open the device yourself – risk of injury!
- Do not insert fingers or objects into device openings. Do not cover device openings.
- Avoid operating the device in the vicinity of flammable vapours.
- Children must not play with the device. Keep the device and power cord away from children under 8 years of age. Never leave the device unattended during operation. Packaging material (e.g. plastic bags) must be kept out of the reach of children.
- Mains connection: The voltage must correspond to the specifications on the device's type plate.
- Never carry or pull the device by the power cord. Do not kink, pinch or pull the power cord over sharp edges. Risk of short circuit due to cable breakage!



Never use near water (baths, sinks, etc.). Do not expose to rain or moisture. Only use the device with dry hands! If the device falls into water, have it checked by a specialist before using it again.

- Never place the device/connection cable on hot surfaces (hotplates) or near open flames. Do not expose the device to intense heat (heating sources, radiators, sunlight). Only extinguish burning devices with a fire blanket.
- Never pull the plug on the power cord or with wet hands. Unplug the device in the event of malfunctions during use, before refilling, before cleaning, before moving or after use. The plug must remain accessible at all times.
- Switch off unused/unattended devices and pull out the mains plug. Do not wrap the mains cable around the device.
- Only operate the device on a flat, stable, dry surface. Never attach it to a wall or ceiling.
- The appliance is intended for domestic use, not for commercial use.
- Do not operate/connect the appliance to a timer or remote-controlled switch.
- For safety reasons, do not use accessories that are not recommended/sold by the manufacturer.



**Protection Class II (double insulated):** This device complies with Protection Class II (double insulation). No protective earth/protective contact is required.

# Technical data

## Art. 1066.47, Art. 1066.87

**100 - 240 V**  
**50 / 60 Hz**

Input voltage

**3**

Heating levels

**Approx. 2m**

Cable length

**II**

Protection class

**2**

Blower speeds

### Power consumption

**900 - 1000 W**

When ON

 
**0.5 W**

When OFF


**-**

OFF/Standby mode  
active after...


# Appliance overview

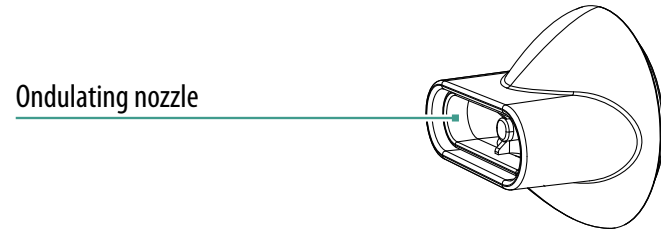

Ondulating nozzle

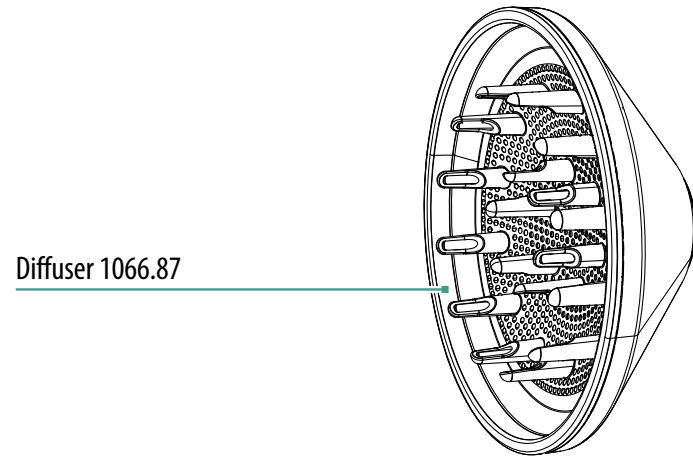 

Diffuser 1066.87

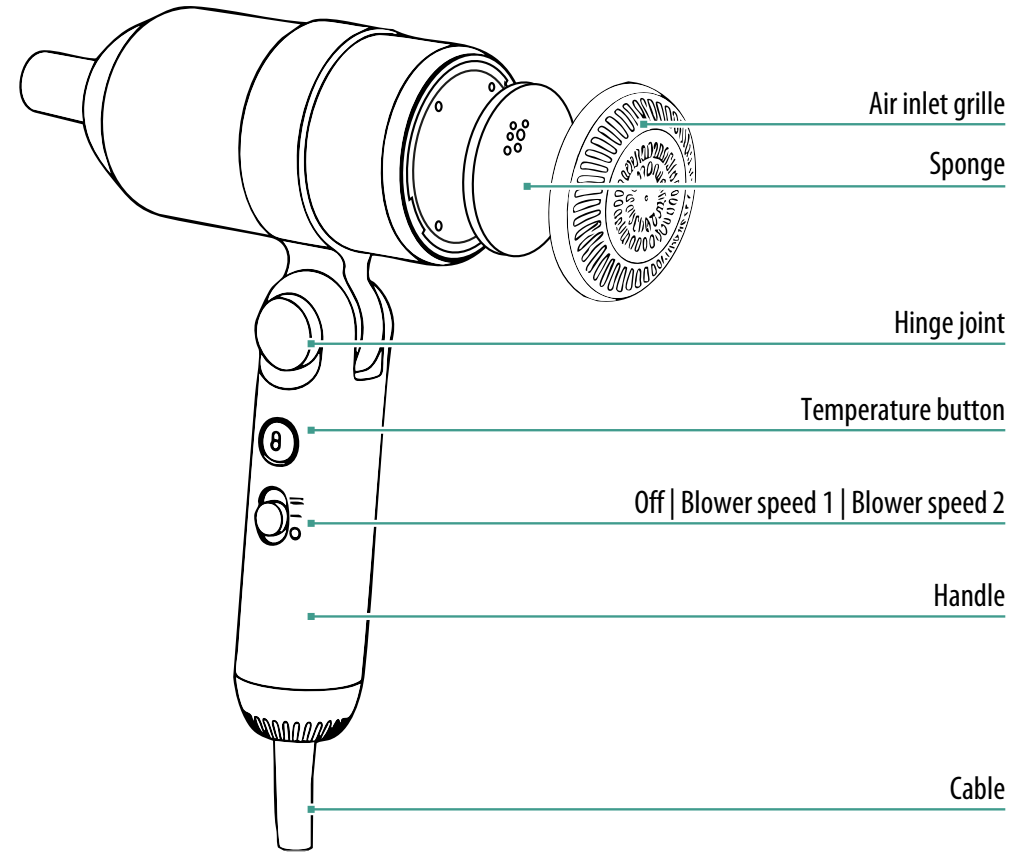 

**Spare parts and accessories shop**  
<https://www.trisaelectronics.ch/en/zubehoer/>

# Use

 


Read the safety instructions first!



Do not use the appliance near bathtubs or other containers filled with water and do not operate it with wet or damp hands.


## 1. Select nozzle

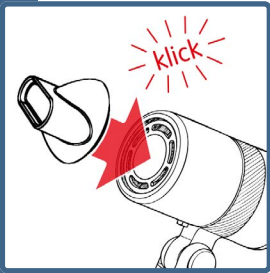

**Ondulating nozzle:** For blow-drying, styling and quick drying.

**Diffuser:** For drying curls, for more volume and less frizz.


## 2. Plug in

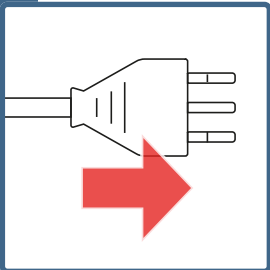 

Plug in the mains plug.


! The mains voltage must correspond to the specifications on the type plate.

## 3. Switch on

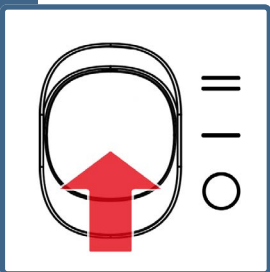 

To switch the hair dryer on, slide the On/Off button to I or II.


## 4. Set temperature

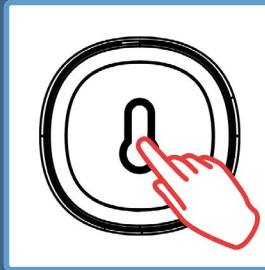 


Press the button repeatedly to change the temperature mode.



 Never switch on the appliance without the air inlet grille. Do not use hairspray when using the hair dryer. CAUTION: Risk of burns! The nozzles become hot. If the appliance gets too hot, it switches off automatically. The appliance can be switched on again manually once it has cooled down completely.

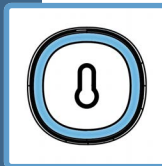

LED lights up blue: Cold air flow

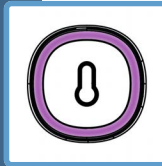 

Changing colours: The temperature changes at 5-second intervals (cold – lukewarm – hot)




LED lights up purple: Lukewarm air flow




LED lights up pink: Hot air flow

## 5. Switch off

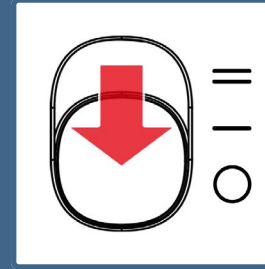 

To switch the hair dryer off, slide the On/Off button to 0.

## 6. Unplug


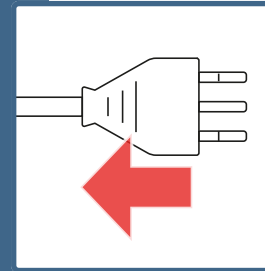 


Unplug the power cord. ! Allow the appliance to cool down completely.

# Cleaning

 
**i** As required, or as soon as dust or hair accumulates in the appliance.

## 1. Remove nozzle

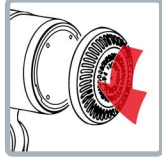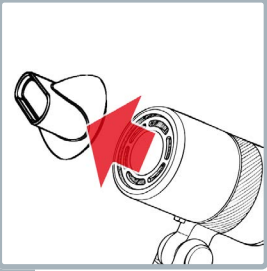

Remove the undulating nozzle/diffuser, sponge and air inlet grille.

## 2. Clean sponge

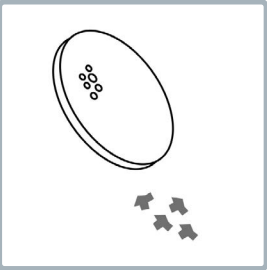 


Tap out the sponge to remove any dust.

! The sponge must not get wet!

**i** The sponge protects the motor from dust.


## 3. Plug in

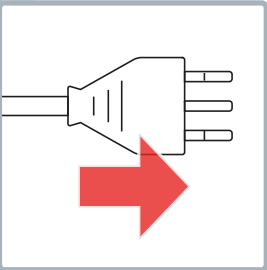 

Plug in the mains plug.

! The mains voltage must correspond to the specifications on the type plate.


## 4. Reverse air flow

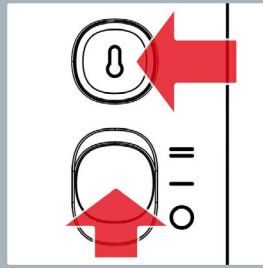

Hold down the temperature button and switch on the appliance at the same time


**i** Dust and hair are blown out of the appliance when the air flow is reversed. The appliance switches the mode off again automatically after 10 seconds.

## 5. Switch off

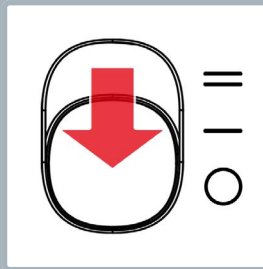

To switch the hair dryer off, slide the On/Off button to **0**.


## 6. Unplug

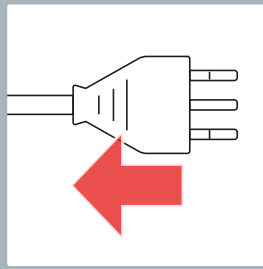 

Unplug the power cord.

! Allow the appliance to cool down completely.

## 7. Wipe off individual parts

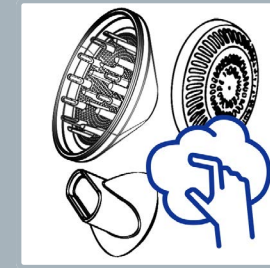 

Wipe off the individual parts (nozzles and filter) with a damp cloth and remove any hair and dust

# Problems and causes

<b>Problem/cause</b>	<b>Solution</b>
Brittle hair	Did you dry your hair too hot? Set a lower temperature.
Hairstyle does not hold	Shape the hair with hot air and fix it in place with cold air.
Hair not very shiny	Did you remember to finish with cold air? Dry the hair with cold air.
Appliance does not work	Is the appliance switched on? Is the cable plugged in? Is the power outlet switched on? Is the appliance overheated?
Appliance smells burnt	Has hair or dust accumulated in the appliance? Clean the appliance, see page 8.
Appliance suddenly switches off	Is the appliance overheated? Switch off the appliance for 5 minutes and let it cool down.
Low air flow	Is the air inlet grille clogged? Clean the appliance and sponge, see page 8.

# User information



We provide a 5-year warranty for this device from the date of purchase. The warranty covers the replacement or repair of a device with material or manufacturing defects. Replacement with a new device or return with a refund of the purchase price is not possible. The warranty does not cover normal wear and tear, commercial use, changes to the original condition, cleaning work, consequences of improper handling or damage caused by the purchaser or third parties, damage attributable to external circumstances or damage caused by batteries. The warranty requires that the defective device be sent in at the purchaser's expense with the warranty card dated and signed by the point of sale or with the purchase receipt.



## Disposal/environmental protection

Never dispose of this device in household waste, but in accordance with local regulations. Only use official collection points in your municipality. If devices are disposed of in an uncontrolled manner, harmful substances can escape and poison the food chain, flora and fauna. Your point of sale is obliged to take back old devices. Immediately render disused devices unusable. Unplug the power plug and cut the power cord.

## Distribution

**CH** Trisa Electronics AG  
Kantonsstrasse 121  
CH-6234 Triengen  
info@trisaelectronics.ch  
+41 41 933 00 30

**DE** Ernst Lorch KG  
Bildstockstraße 9  
D-72458 Albstadt  
HG@lorch-gruppe.com  
+49 (7431) 124 200

**AT** SCD Handels GmbH  
Unterhaus 33  
A-2851 Krumbach  
service@trisaelectronics.at  
+43 (2647) 4304070

**BG** Trisa Ltd.  
43A, Gorski Patnik Street  
BG- 1421 Sofia

**5** YEARS  
GUARANTEE

