

Ice cream maker - La Cremeria Plus



Creamy desserts and refreshing ice cream prepared quickly and easily.

Use: Page 8



Make delicious ice creams, refreshing slushies or creamy yoghurt from simple ingredients.

Recipes: Page 10

Welcome



Please read all the information contained in these instructions for use. Keep the instructions for use in a safe place and pass them on to subsequent users. The device may only be used for its intended purpose in accordance with these instructions. Observe the safety instructions. The device is best operated with an RCD circuit breaker (max. 30mA).



Complies with the European directives on safety and EMC.

We reserve the right to make changes to the design, equipment and specifications. Errors and omissions excepted.



Spare parts and accessories shop

<https://www.trisaelectronics.ch/en/zubehoer/>

Table of Contents

Safety instructions	4
---------------------	---

Specifications	5
----------------	---

Appliance overview	6
--------------------	---

Getting started	7
-----------------	---

Use	8
-----	---

Recipes	10
---------	----

Cleaning	11
----------	----

Problem and causes	12
--------------------	----

User information	13
------------------	----

Safety instructions

- Read all safety instructions, observe the instructions for use, keep them in a safe place and pass them on to subsequent users.
- Children aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, may only use the device if they are supervised by a person responsible for their safety or if they have been shown how to use the device safely and understand the dangers involved. Cleaning and maintenance work must not be carried out by children without supervision.
- Not for household waste. The device must be disposed of in accordance with local regulations.
- If the device is misused, operated incorrectly or repaired improperly, no liability can be accepted for any damage that occurs. In this case, the warranty claim is void.
- Never immerse the device in water or other liquids. No liquid must be allowed to enter the interior of the device (risk of short circuit).
- Check the device, power cord and extension cord for damage before each use. Never use damaged devices (including power cords) – have them repaired or replaced by the manufacturer, its service centre or qualified specialists. Never open the device yourself – risk of injury!
- Do not insert fingers or objects into device openings. Do not cover device openings.
- Avoid operating the device in the vicinity of flammable vapours.
- Children must not play with the device. Keep the device and power cord away from children under 8 years of age. Never leave the device unattended during operation. Packaging material (e.g. plastic bags) must be kept out of the reach of children.
- Mains connection: The voltage must correspond to the specifications on the device's type plate.

- Never carry or pull the device by the power cord. Do not kink, pinch or pull the power cord over sharp edges. Risk of short circuit due to cable breakage!



Never use near water (baths, sinks, etc.). Do not expose to rain or moisture. Only use the device with dry hands! If the device falls into water, have it checked by a specialist before using it again.

- Never place the device/connection cable on hot surfaces (hotplates) or near open flames. Do not expose the device to intense heat (heating sources, radiators, sunlight). Only extinguish burning devices with a fire blanket.
- Never pull the plug on the power cord or with wet hands. Unplug the device in the event of malfunctions during use, before refilling, before cleaning, before moving or after use. The plug must remain accessible at all times.
- Switch off unused/unattended devices and pull out the mains plug. Do not wrap the mains cable around the device.
- Only operate the device on a flat, stable, dry surface. Never attach it to a wall or ceiling.
- The appliance is intended for domestic use, not for commercial use.
- Do not operate/connect the appliance to a timer or remote-controlled switch.
- For safety reasons, do not use accessories that are not recommended/sold by the manufacturer.



Protection class I — with protective conductor:

This appliance complies with protection class I. It must be connected to a socket with a protective conductor (earthed socket).



This appliance contains a flammable, highly combustible refrigerant.

- The refrigerator/freezer is suitable for loading and unloading by children aged 3 to 8.
- If the refrigerator/freezer has been empty for an extended period of time, switch off the appliance, defrost it, clean it, dry it and leave it open to prevent formation of mould.
- Surfaces that come into contact with food should be cleaned thoroughly after use in accordance with the cleaning instructions.

Specifications

Art. 7774.70

 
220-240 V 50 Hz	Input voltage	100 W 22.8 W	Cooling capacity Heating capacity	1 l	Container
1.2 m	Cable length	60 dB	Noise emission	I	Protection class
Approx. 7 kg	Weight (net)	36 × 26 × 23	Dimensions (cm)	R600a	Refrigerant
N/SN +10 °C - +32 °C	Climate class Operating temperature				

Power consumption

100 W	When ON	0.5 W	When OFF	*10 min	OFF/Standby mode active after
--------------	---------	--------------	----------	----------------	----------------------------------

** in Ice Cream mode*


Appliance overview

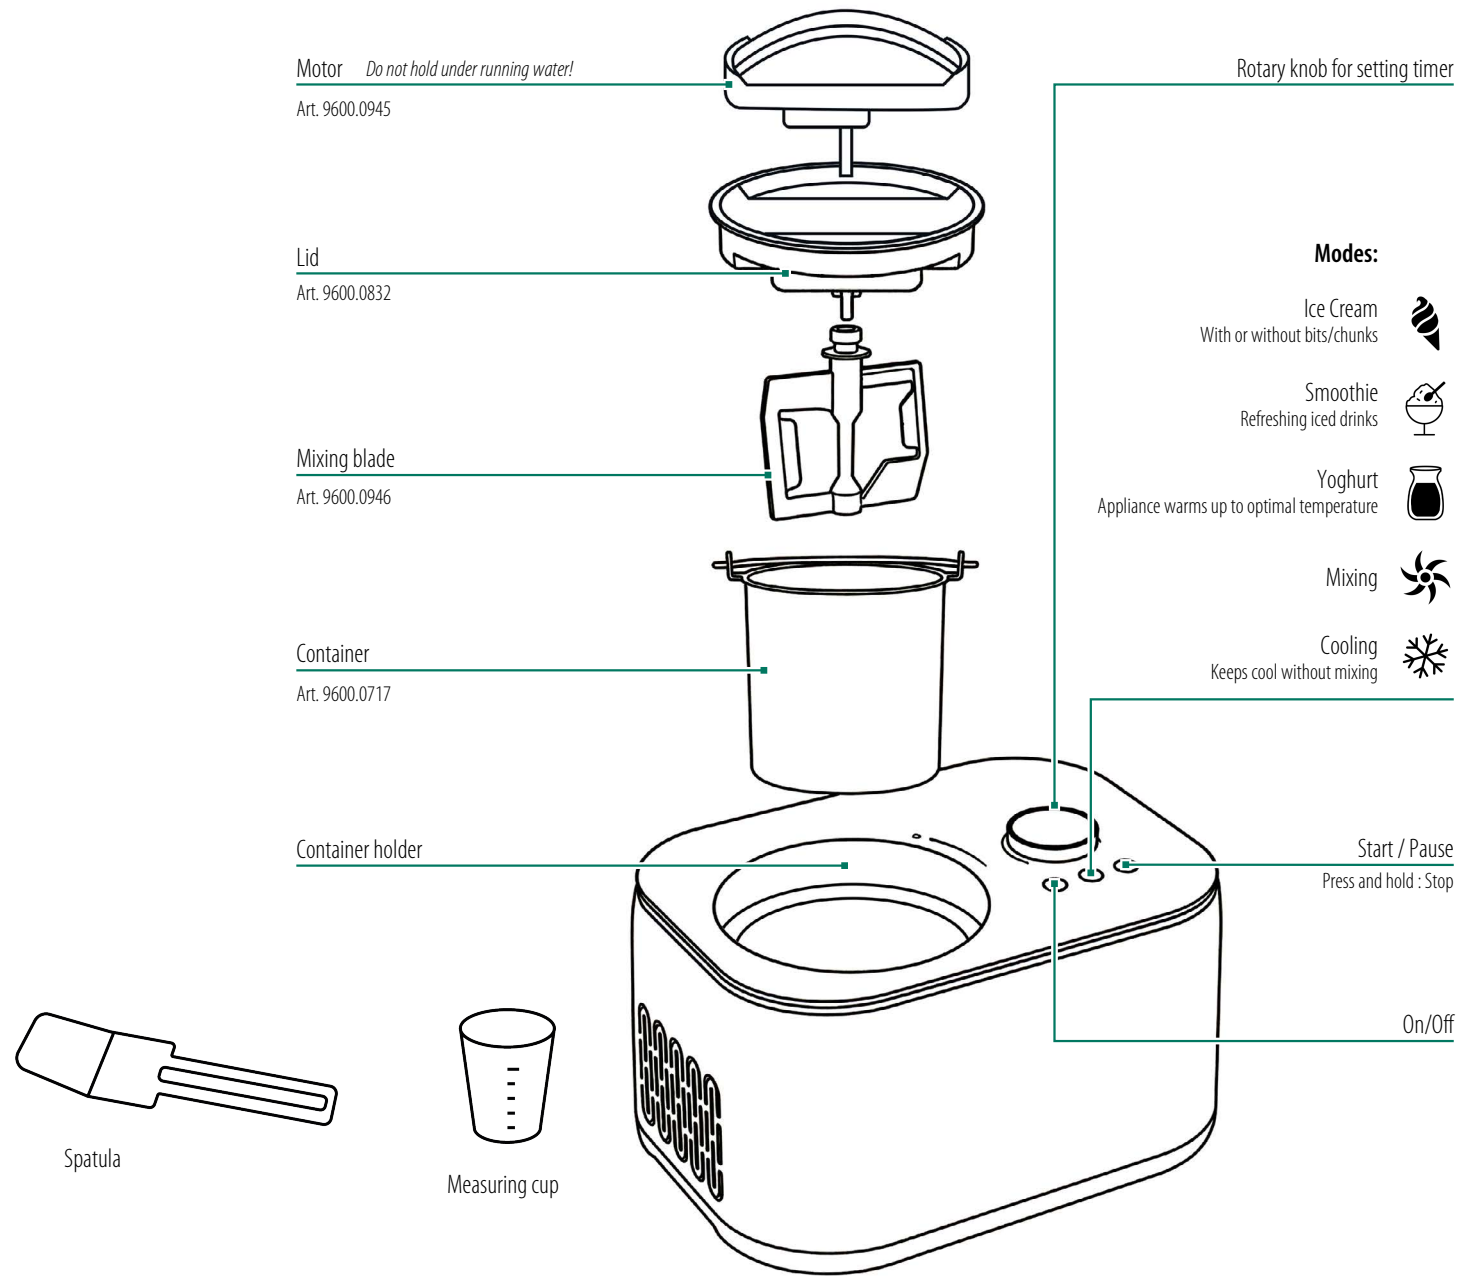

Spare parts and accessories shop
<https://www.trisaelectronics.ch/en/zubehoer/>

Getting started

 1. Set up

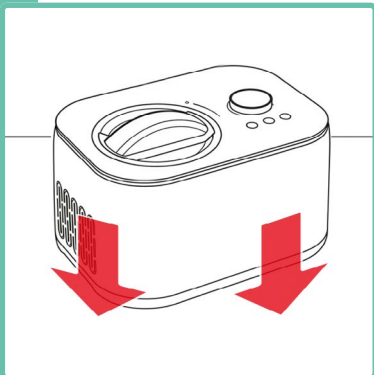

Remove all packaging, set the appliance up on a level surface.

 
 
2. Let appliance settle



Leave in the operating position for 24 hours to allow the refrigerant to settle in the system.

! Applies before first use, after transport or if the appliance has not been stored horizontally.

3. Disassemble mixing unit

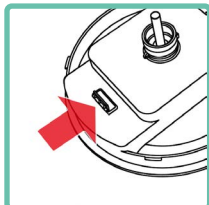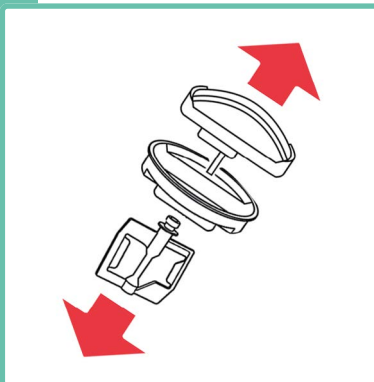

Disassemble the mixing unit into its individual parts (motor, lid and mixing blade).

 
i Press in the black clips on the motor housing to release it.

4. Clean accessories



Wash the accessories under running water and with dishwashing liquid.


5. Wipe off housing

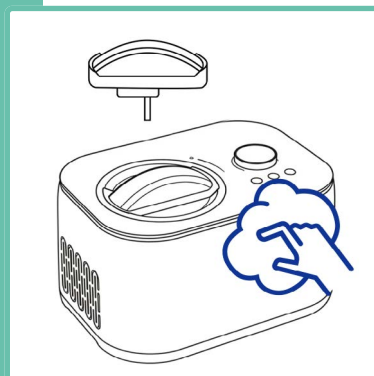

Wipe off the housing with a damp cloth.

! Never immerse the housing and motor in water or hold them under running water.

 6. Assemble mixing unit

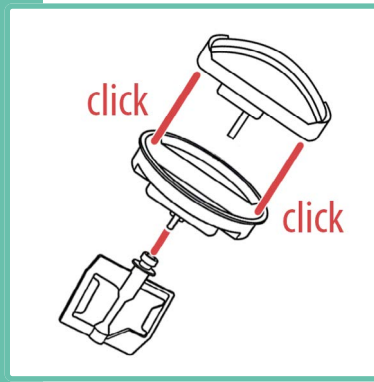


Assemble the motor, lid and mixing blade into a single unit.

i The appliance is now ready for operation.


Use

 1. Prepare recipe

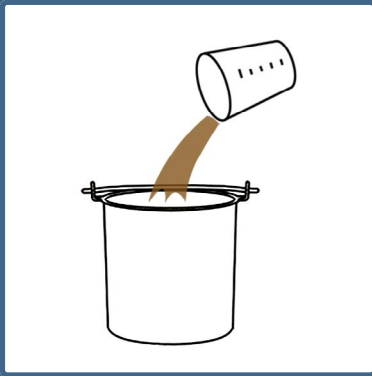



Put the recipe ingredients into the container.
i For better results, mix the ingredients with a whisk.
! Do not fill the container all the way to the top as the mixture will rise. It is best to only fill it halfway.

 2. Position appliance

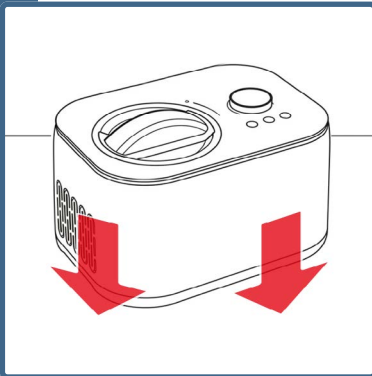



Place the appliance on a stable and level surface.

  3. Insert container

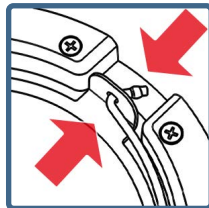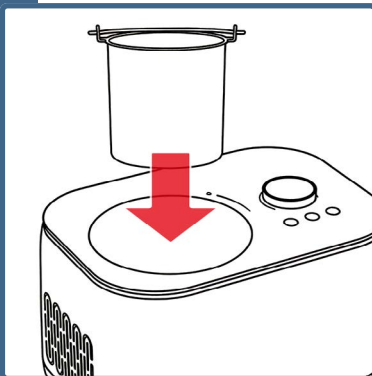



Insert the previously prepared container with the ice cream ingredients.

  4. Put lid on

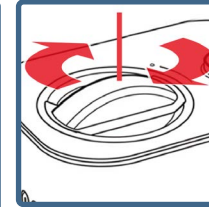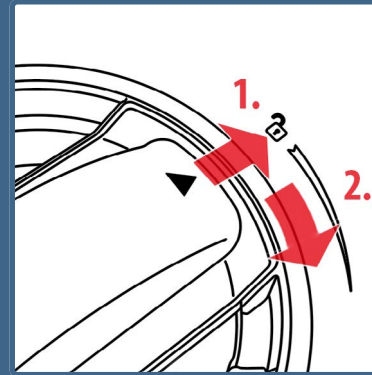



Put the lid on correctly, then turn to close.

  5. Plug appliance in

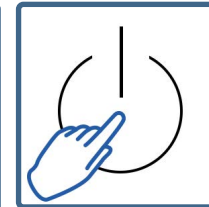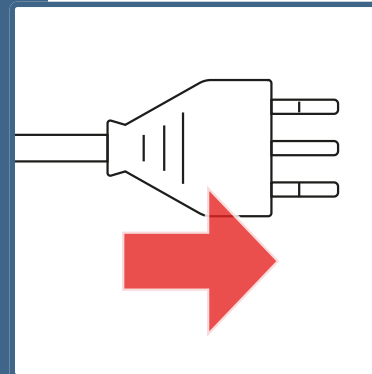

Plug in the appliance and switch it on.

  6. Select programme

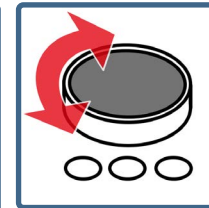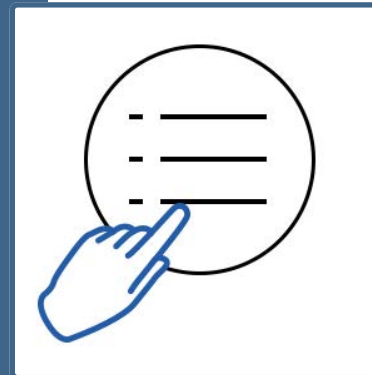

Select the programme according to the recipe. If necessary, adjust the processing time using the rotary knob.

i See the next page for programme options:



Ice cream mode:

This programme is ideal for making classic ice cream. At the end, the appliance automatically switches to cooling mode. Cooling mode remains active for max. 1 hour, then the appliance switches off.



Smoothie mode:

This programme is ideal for making smoothies. At the end, the appliance automatically switches to cooling mode. Cooling mode remains active for max. 1 hour, then the appliance switches off.



Yoghurt mode:

This programme is ideal for making yoghurt. At the end, the appliance automatically switches to cooling mode. Cooling mode remains active for max. 1 hour, then the appliance switches off.



Cooling mode:

This programme is ideal for cooling ingredients or finished products, e.g. if you are not going to consume them immediately.



Mixing mode:

 
 
This programme is ideal for mixing and blending ingredients. It mixes the mixture without cooling it.

7. Start programme



- i** The timer starts counting down after the programme is started. The programme may finish earlier if the mixture is already firm enough.
- i** **Tip:** If necessary, pause the process, loosen any mixture that has frozen to the sides of container and mix it back in.



8. Remove container

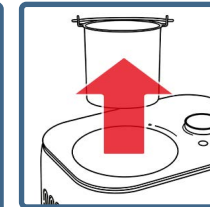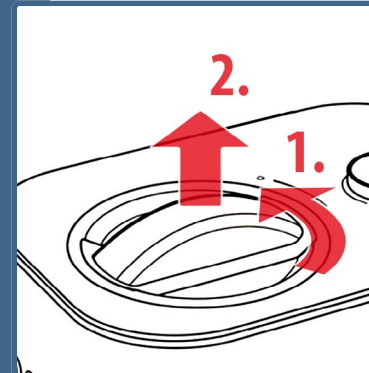

Once the programme has finished (10 beeps), open the lid and remove the container.

- i** **Tip:** Depending on your desired texture/hardness, you may want to put the ice cream in a freezer to finish freezing.

  9. Switch appliance off

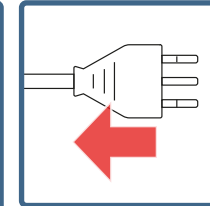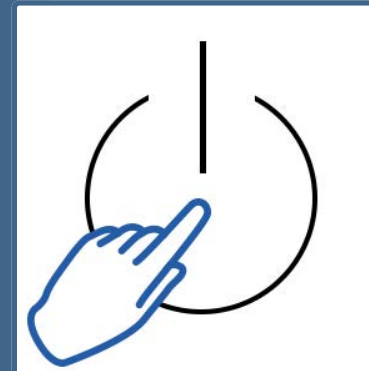

Switch off and unplug the appliance.

Recipes

Ice Cream



- 2 egg yolks
- 60 g sugar
- 180 ml milk
- 180 ml cream
- 1/2 vanilla pod

1. Cut open the vanilla pod and scrape out the seeds. Beat the egg yolks with the sugar. Slowly add in the milk and cream while stirring continuously.
2. Slowly bring the milk containing the vanilla pod and seeds to the boil in a pan.
3. Pour this mixture back into the pan through a sieve and stir until a wafer-thin coating has formed on the spoon.
4. Remove the pan from the heat, leave to cool and stir in the vanilla sugar. Pour everything into the ice cream maker.
5. Set the appliance to stir the mixture in ice cream mode for about 50 to 60 minutes until it thickens.

Yoghurt



- 750 ml milk
- 50 g yoghurt
- or 1 tsp lactic acid bacteria

1. Briefly heat the milk in a pan to 90°C, then leave to cool to 40°C.
2. Pour the milk and yoghurt (or lactic acid bacteria) into the container. Place the container in the appliance.
3. Select the yoghurt mode and leave to ferment for 8 hours.

Slushie



- 500 ml soft drink or syrup (mixing ratio of approx. 1:6 with water, depending on the syrup)

1. Pour the soft drink or syrup mixed with water into the ice cream maker and start the slushie programme.

i

Colourful drinks look great as slushies. The sugar content determines the consistency, do not use diet or zero-sugar drinks.

Important tips for all recipes:

- Only partially fill the container so that there is enough space to mix the mixture properly.
- It is best to stir in chocolate chips, nuts or biscuit pieces quickly near the end

 
 
More recipes



www.trisaelectronics.ch/rezepte/



Cleaning

1. Switch appliance off

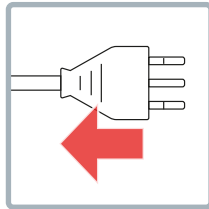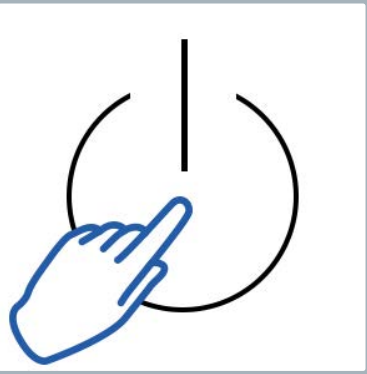

Switch off and unplug the appliance.

  
2. Disassemble mixing unit

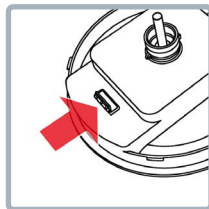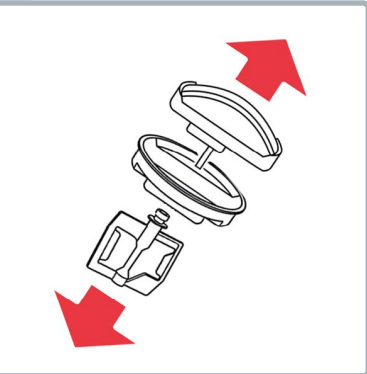

Disassemble the mixing unit into its individual parts (motor, lid and mixing blade).


i Press in the black clips on the motor housing to release it.

 3. Clean accessories

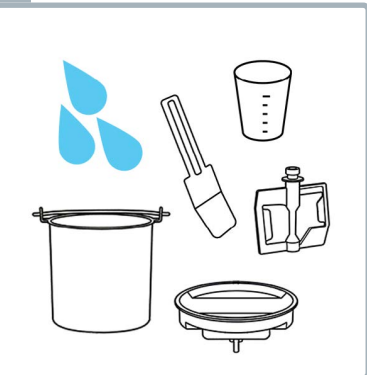

Wash the accessories under running water and with dishwashing liquid.

 
4. Wipe off housing

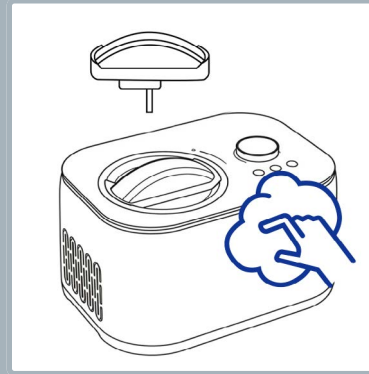

Wipe off the housing with a damp cloth.

! Never immerse the housing and motor in water or hold them under running water.

 5. Dishwasher safe

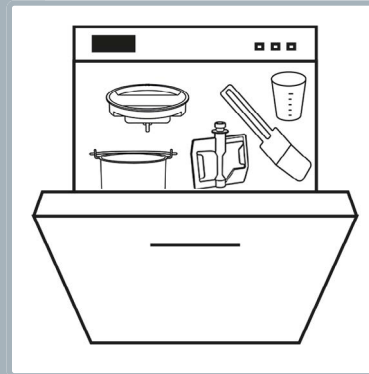

The container, mixing blade, lid, measuring cup and spatula are dishwasher-safe.

Problem and causes

Problem/cause	Solution
The motor stops unexpectedly	The motor is equipped with an overload protection function and stops automatically as soon as the ice cream is firm enough.
The compressor does not start back up after a programme pause.	If a programme with cooling mode is paused and then resumed, the compressor only starts back up after a safety period of approx. 3 minutes. Wait for the safety period to elapse.
The container is stuck	Is there frozen water between the container and container holder? Switch off the appliance and let it warm up.
The motor does not run	Is the lid put on correctly and closed? Observe the marking on the lid.
Is the appliance not running smoothly or does the container not fit into the container holder?	Is the motor, mixing blade or container damaged? Do not use damaged accessories.

User information



We provide a 5-year warranty for this device from the date of purchase. The warranty covers the replacement or repair of a device with material or manufacturing defects. Replacement with a new device or return with a refund of the purchase price is not possible. The warranty does not cover normal wear and tear, commercial use, changes to the original condition, cleaning work, consequences of improper handling or damage caused by the purchaser or third parties, damage attributable to external circumstances or damage caused by batteries. The warranty requires that the defective device be sent in at the purchaser's expense with the warranty card dated and signed by the point of sale or with the purchase receipt.



Disposal/environmental protection

Never dispose of this device in household waste, but in accordance with local regulations. Only use official collection points in your municipality. If devices are disposed of in an uncontrolled manner, harmful substances can escape and poison the food chain, flora and fauna. Your point of sale is obliged to take back old devices. Immediately render disused devices unusable. Unplug the power plug and cut the power cord.

Distribution

CH Trisa Electronics AG
Kantonsstrasse 121
CH-6234 Triengen
info@trisaelectronics.ch
+41 41 933 00 30

DE Ernst Lorch KG
Bildstockstraße 9
D-72458 Albstadt
HG@lorch-gruppe.com
+49 (7431) 124 200

AT SCD Handels GmbH
Unterhaus 33
A-2851 Krumbach
service@trisaelectronics.at
+43 (2647) 4304070

BG Trisa Ltd.
43A, Gorski Patnik Street
BG- 1421 Sofia

