




1. Download newest app




or directly via:




2. Please follow these instructions for the latest app version

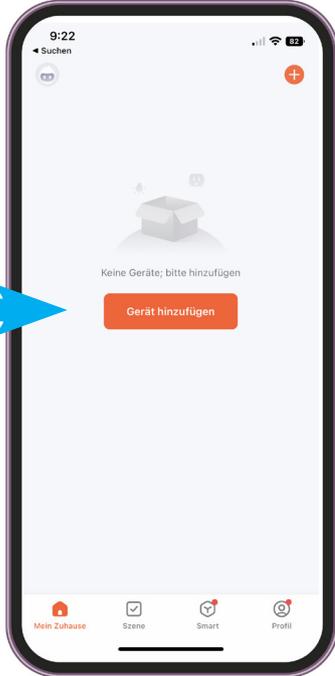

Step 1:
• Open app, add device

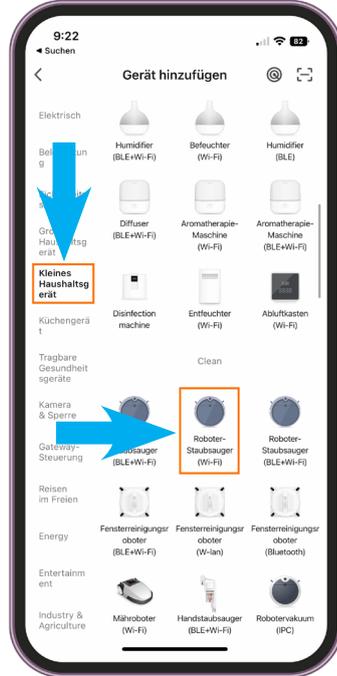

Step 2:
• Select „Small household appliance“ category
• Select „Robot Vacuum Cleaner (Wi-Fi)“

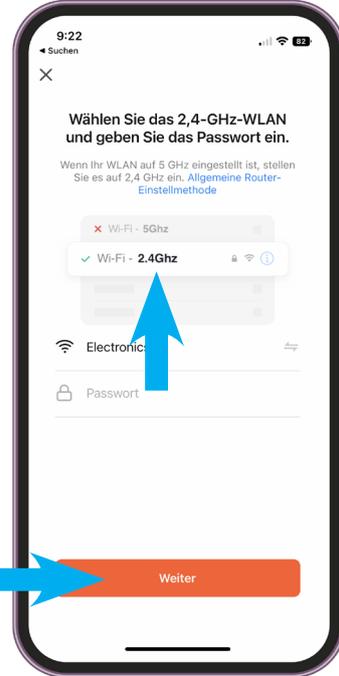


Step 3:
• Enter WLAN and password
IMPORTANT! For the app to work, it must be a **2.4 GHz WLAN**




(please ignore the title „Reset your device“ - this is a software error)

Step 4:
 **5 sec.**
 **beep beep**
• Press and hold the ON/OFF button on the robot vacuum cleaner for 5 seconds until the display flashes and it beeps
• select „Confirm, that the display is flashing“

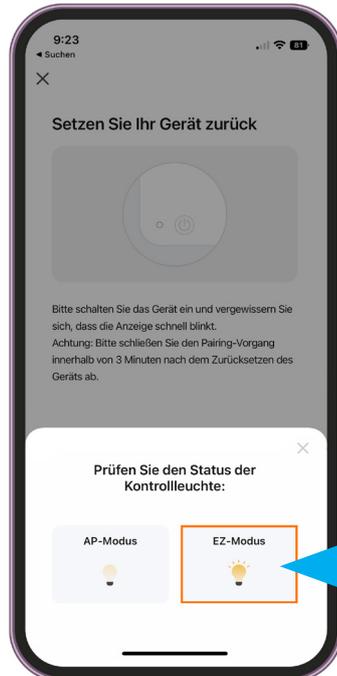

Step 5:
- Select EZ Mode

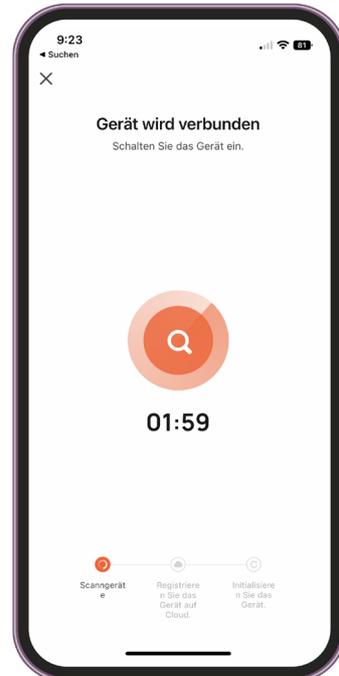

Step 6:
• Device is connected within 2 minutes
IMPORTANT! Device must not be connected to the charging station during app installation